

FEIN GRIT

GX 75 / GX 75 2H



FEIN GRIT



GX 75 / GX 75 2H

技术性数据 .

机 型	GX 75	GX 75	GX 75 2V	GX 75 2V
购物号	7 902 01 00 40 3	7 902 01 00 40 3	7 902 01 00 23 3	7 902 01 00 23 3
无负载转速				
[分钟]	2 880	3 450	2 880	3 450
输入功率 [瓦]	3 000	3 000	3 000	3 000
电压 [伏特]	3×400	3×440	3×230	3×220
频率 [Hz]	50	60	50	60
砂带速度				
[米 / 秒]	30	36	30	36
重量符合				
EPTA-				
Procedure				
01/2003 的规				
定标准 [千克]	65	65	65	65
绝缘等级	I/⊕	I/⊕	I/⊕	I/⊕
砂带长度				
[毫米]	2 000	2 000	2 000	2 000
砂带宽度				
[毫米]	75	75	75	75

FEIN GRIT



GX 75 / GX 75 2H

CN

机型	GX 75 2H	GX 75 2H	GX 75 2H2V	GX 75 2H2V
购物号	7 902 02 00 40 3	7 902 02 00 40 3	7 902 02 00 23 3	7 902 02 00 23 3
无负载转速				
[分钟]	1 440/2 880	1 725/3 450	1 440/2 880	1 725/3 450
输入功率 [瓦]	1 500/2 000	1 500/2 000	1 500/2 000	1 500/2 000
电压 [伏特]	3x400	3x440	3x230	3x220
频率 [Hz]	50	60	50	60
砂带速度				
[米 / 秒]	15/30	18/34	15/30	18/34
重量符合				
EPTA-				
Procedure 01/				
2003 的规定标				
准 [千克]	67	67	67	67
绝缘等级	I/⊕	I/⊕	I/⊕	I/⊕
砂带长度				
[毫米]	2 000	2 000	2 000	2 000
砂带宽度				
[毫米]	75	75	75	75

FEIN GRIT





GRIT – 砂帶機是屬於一類安全保護機器 (Class 1)

**當更換電機,開關或電源線等零件後必須要進行電器測試(根據VDE 701/Part 1),
以下為須要測試之項目:**

1. 接地測試	1. 測試頭夾在砂帶機電源插頭的接地位置,另一測試棒須跟機身外殼進行測試 2. 地線測試儀器須調電壓至4V-24V, AC or DC,電流最少為0.2A, 測試時間3秒 3. 接地電阻不能大於0.3Ω (測試時包括5m電源線)
2. 絕緣測試	1. 將測試頭, 火線(L)及中性線(N) 連接在一起 2. 將砂帶機開關打到“ON” 3. 把測試棒接觸L1,L2 及L3位置,每個位置必須測試3秒鐘,測試電壓為500V DC,絕緣電阻最少要有2MΩ
3. 高壓測試	1. 將測試頭, 火線(L)及中性線(N) 連接在一起 2. 將砂帶機開關打到“ON” 3. 把測試棒接觸L1,L2 及L3位置,每個位置必須測試3秒鐘,測試電壓為1000VAC,測試電流須大於5mA,進行測試時過載繼電器不能啟動



1.
 - 1.1.
 - 1.2.
 - 1.3.
2.
 - 2.1.
3.
 - 3.1.
 - 3.2.
4.
 - 4.1.
5.
 - 5.1.
 - 5.2.
- 6.

FEIN GRIT



1.


GRIT



FEIN GRIT



1.

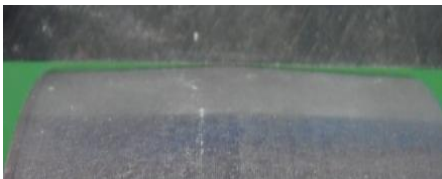

GI 100



GI 100

FEIN GRIT




1.

“ ”

12

2

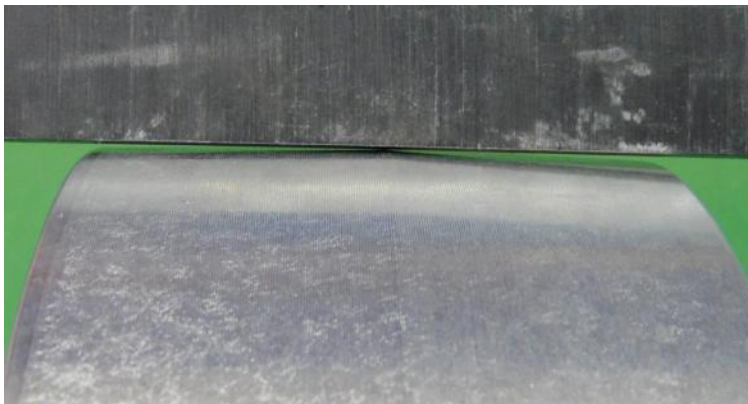

“ ”

“ ”

FEIN GRIT



1.




FEIN GRIT



1.1.



- 1.
- 2.
- 3.

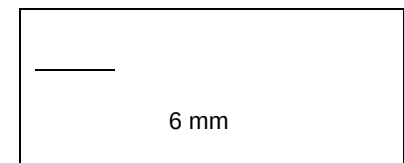

FEIN GRIT



1.1.



- 1.
- 2.
- 3.

(M24)

8 mm
24 mm
6 99 02 410 000

FEIN GRIT


1.2.



1.




2.



1.3.


校正砂带的轨道。

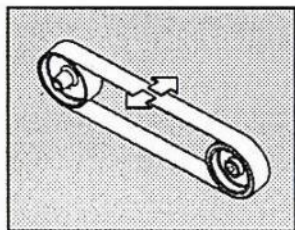

让机器运转片刻，以便检查砂带的转动轨道。如果砂带向左或向右偏移，则必须旋转星状螺丝 (14) 让轨道退回中央位置。

如果无法将砂带移回中央位置：


- 使用压缩空气清洁传动轮 (21) 和接触轮 (19)。
- 检查传动轮和接触轮是否有损坏，变形和磨损的痕迹。如果发现损坏的零件必须马上更换！

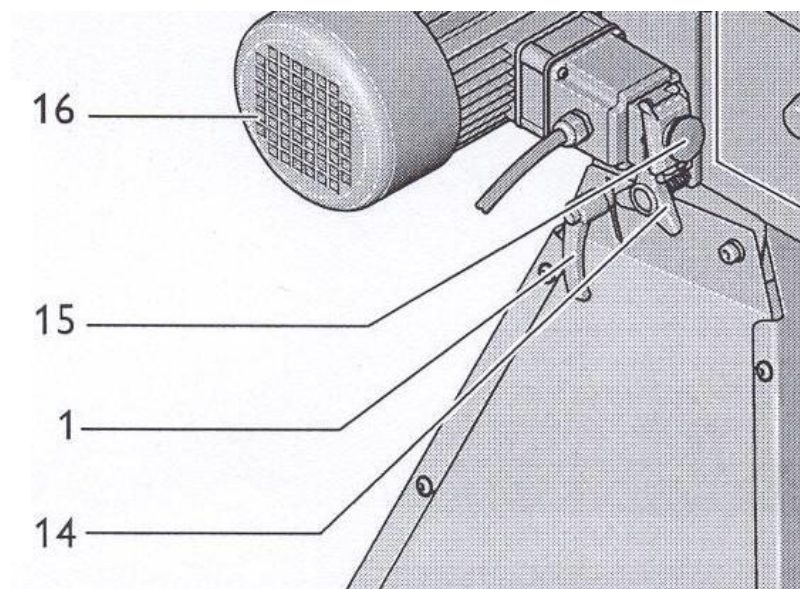

FEIN GRIT



1.3.

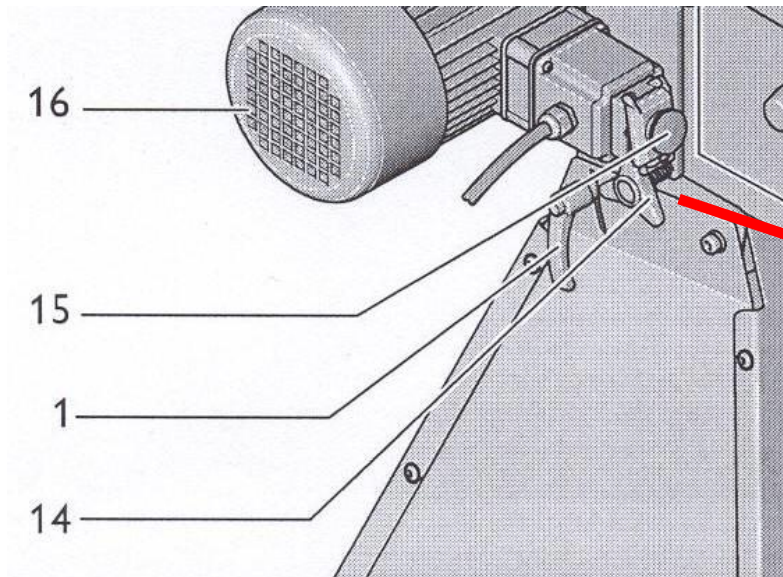


FEIN GRIT




2.

GRIT

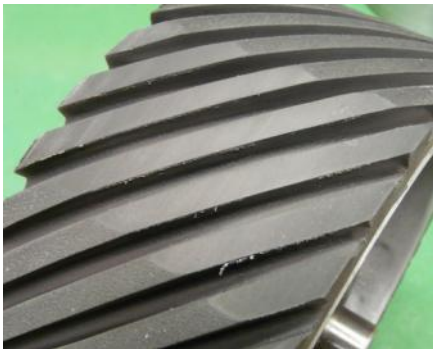

FEIN

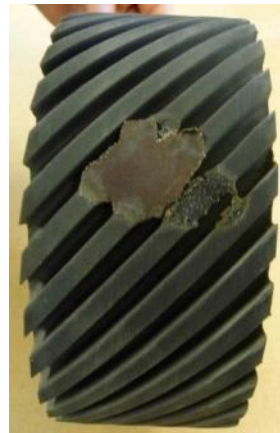

FEIN



Sahre / MVK
Hedensted / GRIT



2008 / 11

FEIN GRIT



2.





3 90 00 001 459

FEIN GRIT




2.

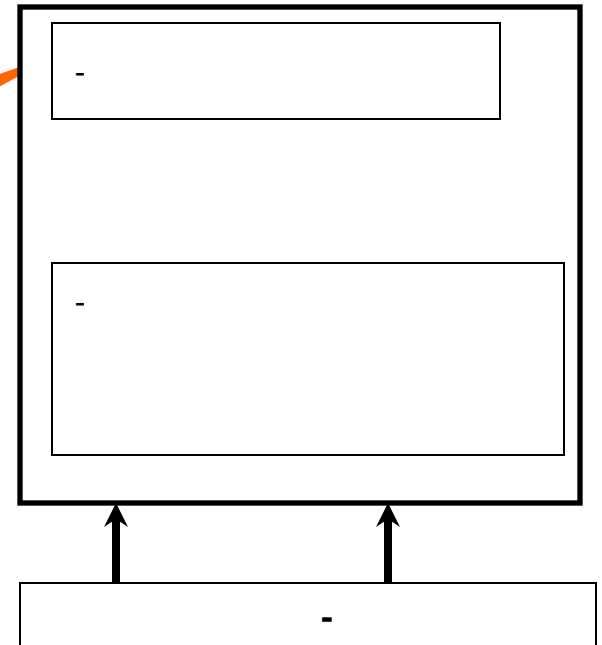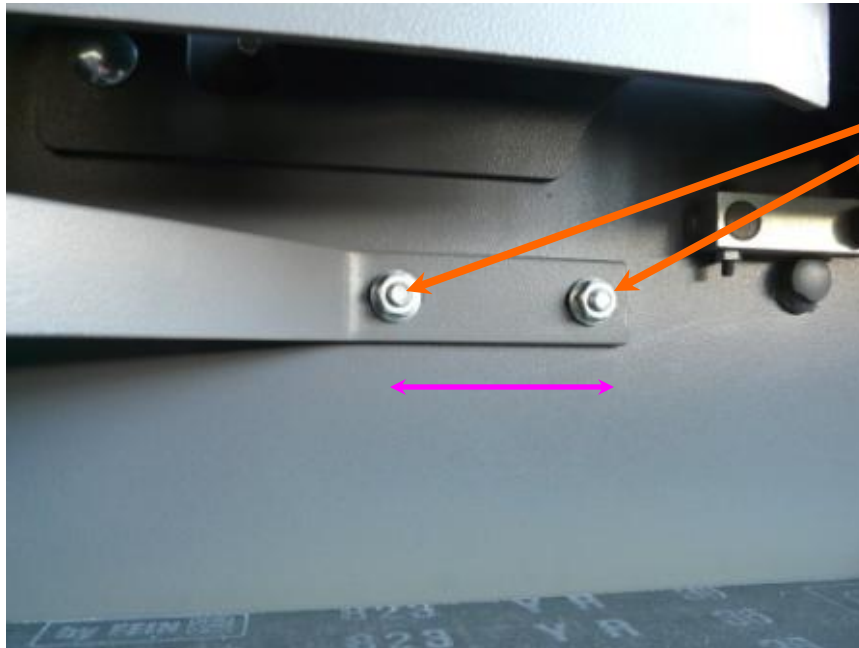

FEIN GRIT



2.1.

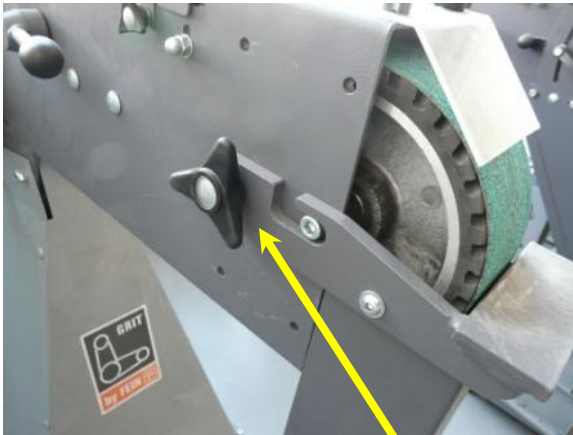


- 1.
- 2.
- 3.

2

FEIN GRIT



2.1.

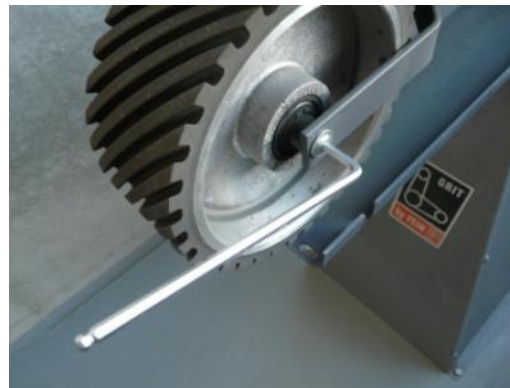

- 1.
- 2.
- 3.

M 10
M 8



8 mm
5 mm



3.

2008


“SUSPA”



FEIN GRIT




3.1.

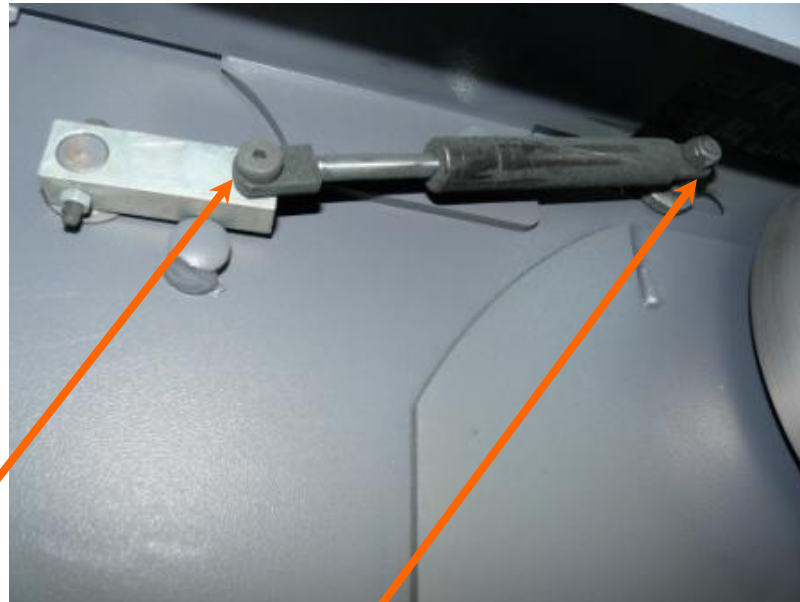


- 1.
- 2.
- 3.

13 mm

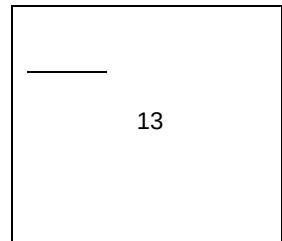

FEIN GRIT

3.2.

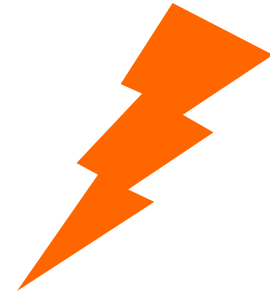



4.



GRIT GX 75 (3 kW) GX 75 2H (1.5 / 2 kW)

FEIN GRIT



4.





3 90 00 004 494

FEIN GRIT



4.1.

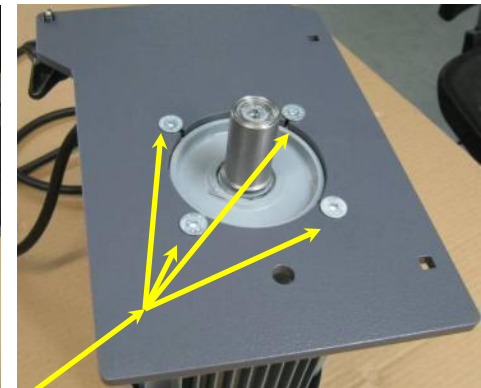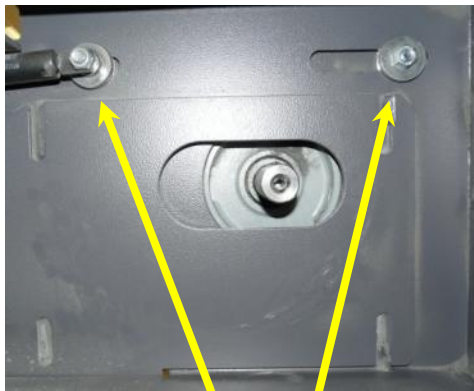

1.

2

2.

3.

4

13 mm
5 mm



5.



GX 75



GX 75 2H



5.

3 90 00 001 701 CEE




FEIN GRIT




5.1.

GX 75

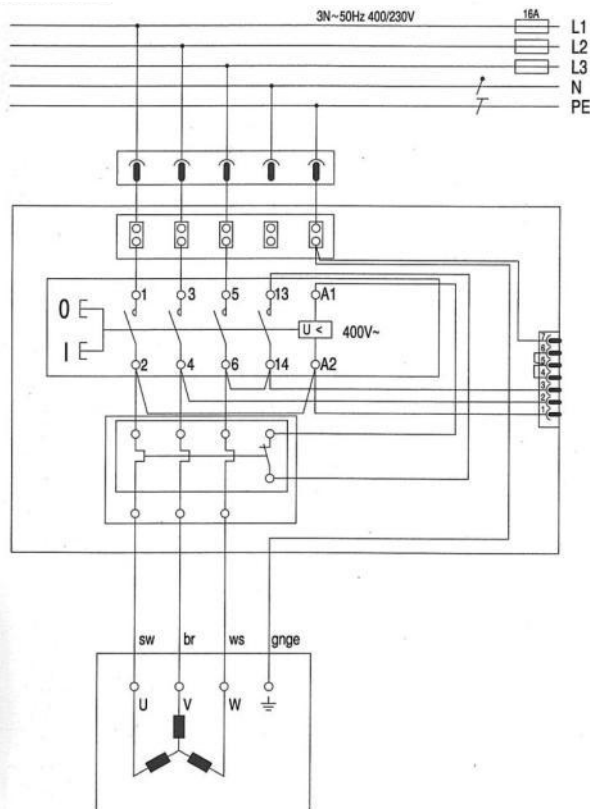

GX 75 2H

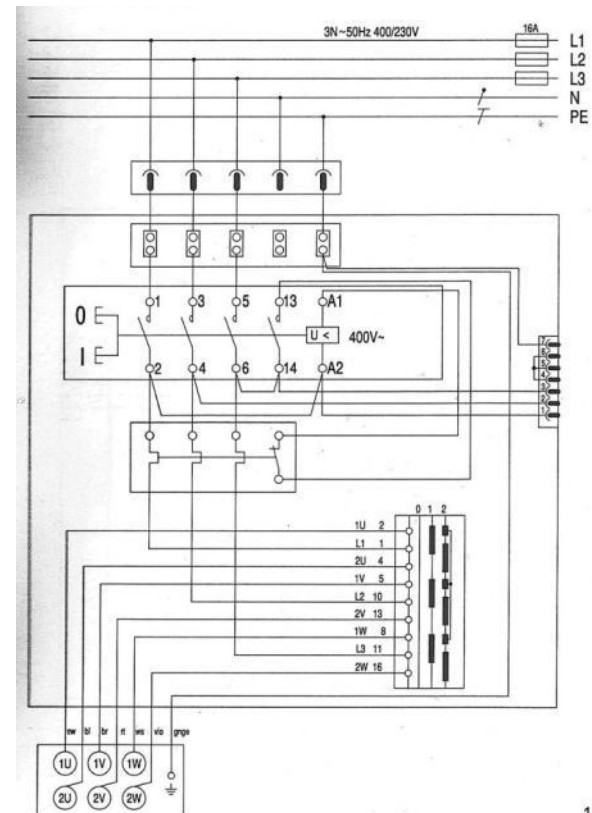

FEIN GRIT




5.2.



1.
2.

4
4

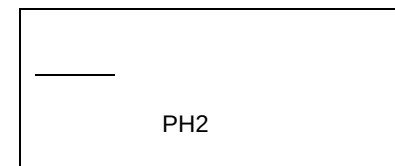

FEIN GRIT

5.2.




- 1.
- 2.
- 3.

6 mm
PH2



5.2.

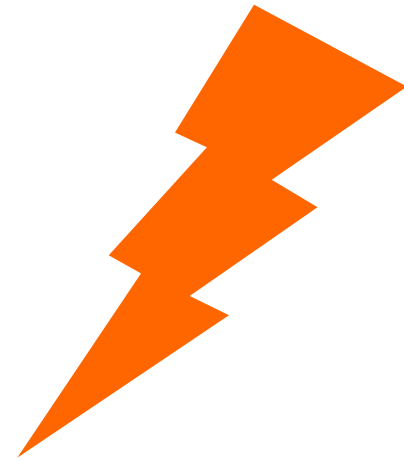



6.

■		3 90 00 000 006	
■		3 90 00 000 000	
■		3 90 00 000 005	
■		3 90 00 000 484	
■		3 90 00 000 004	
■	5	3 90 00 000 001	
■		3 90 00 000 480	GX 75
■		3 90 00 000 483	GX 75 2H
■	CEE	3 90 00 001 701	
■		3 90 00 000 479	
■	3 x 400 V	3 90 00 001 092	GX 75
■	3 x 400 V	3 90 00 001 093	GX 75 2H
■		3 90 00 001 459	
■		3 90 00 004 494	
■	B14 -	3 90 00 001 563	
■		3 90 00 001 699	
■		3 90 00 000 211	
■		3 90 00 000 491	