



Applies to:

KBE 35 (A), KBE 35 (B), KBE 35 (C)



Contents

Contents.....	2
1 Models described	4
2 Technical data	5
3 Symbols used.....	6
4 Notes and requirements	7
5 Safety instructions	8
6 Tools, lubricants and auxiliary substances required.....	10
6.1 Standard tools	10
6.2 Special tools.....	11
6.3 Lubricants and auxiliary substances required	11
7 Test and diagnostics options	12
8 Removal.....	13
8.1 Removing the container.....	13
8.2 Removing the motor housing.....	14
8.2.1 Removing the connecting cable	14
8.2.2 Removing the drill motor	15
8.2.3 Removing the carbon brushes.....	16
8.2.4 Removing the motor housing.....	17
8.2.5 Removing the intermediate gear box.....	18
8.2.6 Removing the intermediate gear box.....	19
8.2.7 Removing the armature	21
8.2.8 Removing the motor housing.....	23
8.3 Removing the gearbox housing	24
8.3.1 Removing the gearbox parts	24
8.3.2 Removing the shaft	25
8.3.3 Removing the gearbox parts	26
8.4 Disassembling the drill jig	28
8.4.1 Removing the control panel.....	28
8.4.2 Removing the control panel.....	29
8.4.3 Removing the electronics	30
8.4.4 Removing the electronics	32
8.4.5 Removing the magnetic foot.....	33
8.4.6 Removing the magnetic foot.....	34





Contents

8.4.7	Removing the protective hose	35
8.4.8	Disassembling protective hose	36
8.4.9	Removing the guide	37
8.4.10	Removing the spider	40
8.4.11	Removing the spider	41
9	Fitting	42
9.1	Assembling the drill jig	42
9.1.1	Fitting the spider	42
9.1.2	Positioning the spider	43
9.1.3	Positioning the guide	44
9.1.4	Fitting the protective hose	47
9.1.5	Positioning the protective hose	48
9.1.6	Fitting the magnetic foot	49
9.1.7	Positioning the magnetic foot	50
9.1.8	Fitting the electronics	51
9.1.9	Positioning the electronics	52
9.1.10	Fitting the control panel	54
9.1.11	Positioning the control panel	55
9.2	Fitting the gearbox housing	56
9.2.1	Fitting the gearbox parts	56
9.2.2	Positioning the shaft	57
9.2.3	Positioning the gearbox parts	58
9.3	Fitting the motor housing	60
9.3.1	Fitting the motor housing	60
9.3.2	Fitting the armature	61
9.3.3	Fitting the intermediate gear box	64
9.3.4	Positioning the intermediate gear box	66
9.3.5	Positioning the motor housing	67
9.3.6	Positioning the carbon brushes	68
9.3.7	Positioning the drill motor	69
9.3.8	Positioning the connecting cable	71
9.4	Setting the guide	73
9.5	Positioning the container	74
10	Inspection following repairs	75





1 Models described

These repair instructions describe how to repair the following models:

Model	Material number
KBE 35 (A)	7 270 62
KBE 35 (B)	7 270 66
KBE 35 (C)	7 270 80





2 Technical data

Technical data

The complete technical data can be found in the operating instructions for the model.

Troubleshooting

Troubleshooting for all devices can be found in the FEIN electronic information system.

Specific test specifications and measured values

Up-to-date test data for all devices can be found in the FEIN electronic information system.

Special tools, lubricants and auxiliary substances

The special tools catalogue and the lubricants and container sizes available from FEIN can be found in the FEIN electronic information system.

Lists of spare parts

Lists of spare parts and exploded views are available online in our spare parts catalogue, which can be accessed via the FEIN website.

Connection diagram

Lists of spare parts and exploded views can be found in the FEIN electronic information system.





Symbols used

3 Symbols used

	Refers to measures for avoiding the risk of injuries.
	Caution: Crushing hazard
	Refers to information or instructions that should be followed. Non-observance can result in damage or malfunctions.
	Read the operating instructions.
	Indicates notes that provide information or instructions that may provide a better understanding and contribute to the more effective use of the product.
	Part of the navigation interface.





4 Notes and requirements

Please note

These instructions are only intended for persons with suitable technical training. It is assumed that the reader has mechanical and electrical training.

Only use original FEIN spare parts.



PLEASE NOTE:

Read the operating instructions for the product before carrying out the repair work.

Provisions

Please note that power tools may only be repaired, maintained and checked by a trained electrician, as improper repair can result in serious risks to the user.

Outside Germany, the regulations applicable in the relevant country must be observed.

The provisions set out in **DIN VDE 0701-0702** should be observed after repairs.

The relevant accident prevention regulations are to be observed during commissioning.

The German Equipment and Product Safety Act [ProdSG] applies for correct use.

Disclaimer

The content of this documentation has been carefully reviewed and produced to the best of our knowledge. C. & E. Fein GmbH assumes no responsibility for the completeness, relevance, quality or correctness of the information provided.

Liability claims against C. & E. Fein GmbH that relate to material or immaterial damage caused by the use or failure to use the information provided or by the use of incorrect or incomplete information are excluded. Claims relating to acts committed intentionally or through gross negligence are categorically excluded.





5 Safety instructions

5.1 Structure

 SIGNAL WORD FOR THE DANGER CLASSIFICATION.
Type and source of the danger.
Possible consequences.
Measure that must be taken in order to avoid this danger.

5.2 Danger classification

Warning

This warning refers to a dangerous situation. If the situation is not avoided, this may result in severe injuries or death.

 WARNING!
Type and source of the danger.
Possible consequences.
Measure that must be taken in order to avoid this danger.

Caution

This warning refers to a potentially dangerous situation. If the situation is not avoided, this may result in slight or minor injuries. This may also be used as a warning against material damage.

 CAUTION!
Type and source of the danger.
Possible consequences.
Measure that must be taken in order to avoid this danger.

Please note

Indicates a potentially harmful situation. If this situation is not avoided, the product or an object in its environment could be damaged.

 PLEASE NOTE:
Type and source of the danger.
Damage to the product or its environment.
Measure that must be taken in order to avoid this danger.





5.3 Information

Indicates notes that provide information or instructions that may provide a better understanding and contribute to the more effective use of the product.



INFORMATION

Tip





6 Tools, lubricants and auxiliary substances required

6.1 Standard tools

Cross-head screwdriver	PH2
Torx	T15, T20
Slotted screwdriver	125x7
Socket head wrench set	
Circlip pliers	
Plastic hammer	
Arbor press	
Long-nosed pliers	
Combination pliers	
Socket wrench	7 mm
Sleeve	5 mm inner diameter 16 mm outer diameter; 13 mm inner diameter 26 mm outer diameter; 7 mm inner diameter 18 mm outer diameter; 7 mm inner diameter 13 mm outer diameter; 10 mm inner diameter 23 mm outer diameter; 26 mm inner diameter 30 mm outer diameter; 17 mm inner diameter 25 mm outer diameter; 5 mm inner diameter 15 mm outer diameter; 16 mm inner diameter 25 mm outer diameter; 10 mm inner diameter 24 mm outer diameter; 26 mm inner diameter 42 mm outer diameter
Torque wrench with hexagon socket fixture	2.5 mm





6.2 Special tools

Assembly aid		64122121010
Drawing-off socket cap		64104150000
Chuck cone	19 mm diameter	64107019007
	26 mm diameter	64107026000

6.3 Lubricants and auxiliary substances required

Grease	04013203000	130 g	Gearbox
Grease	04012803000		Guide, gear rack





7 Test and diagnostics options

Not currently available.



8 Removal

8.1 Removing the container



INFORMATION

Fluid may be present in the container.

Always drain the container (1) before disassembly.


1. Remove the container (1).
2. Remove the hose (2) from the hose socket.

8.2 Removing the motor housing


8.2.1 Removing the connecting cable

Tool(s):


- Torx T15

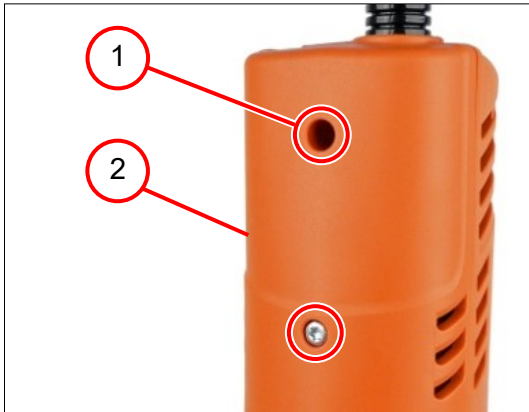

1. Unscrew the two screws (1).
2. Remove the cover (2).

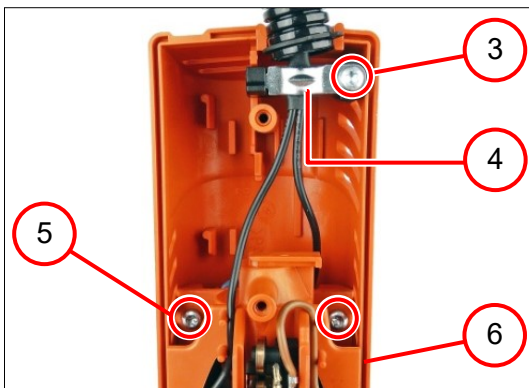

3. Unscrew the screw (3).
4. Remove the cable clamping piece (4).
5. Unscrew the two screws (5).
6. Remove the cover (6).

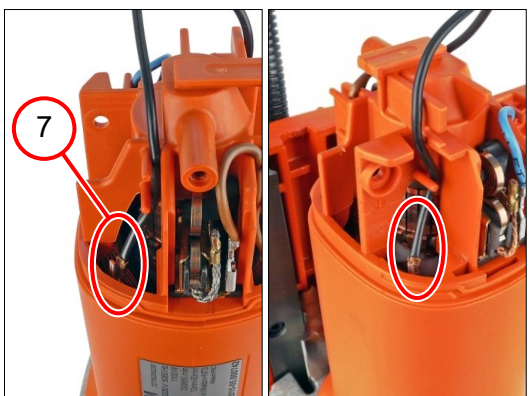

7. Remove the two strands (7).

8.2.2 Removing the drill motor

Steps that must be completed:


- Removing the container
- Removing the connecting cable

Tool(s):

- Slotted screwdriver
- Socket head wrench, 6 mm



1. Unscrew the flat-head screw (1).

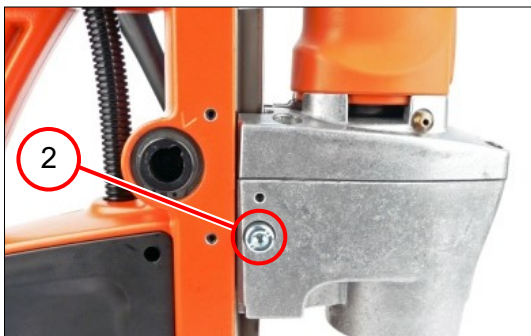


CAUTION!

Crushing hazard around the drill motor

Crushing can occur.

Move the drill motor down using the spider, before the screw (2) is unscrewed.

2. Unscrew the screw (2).

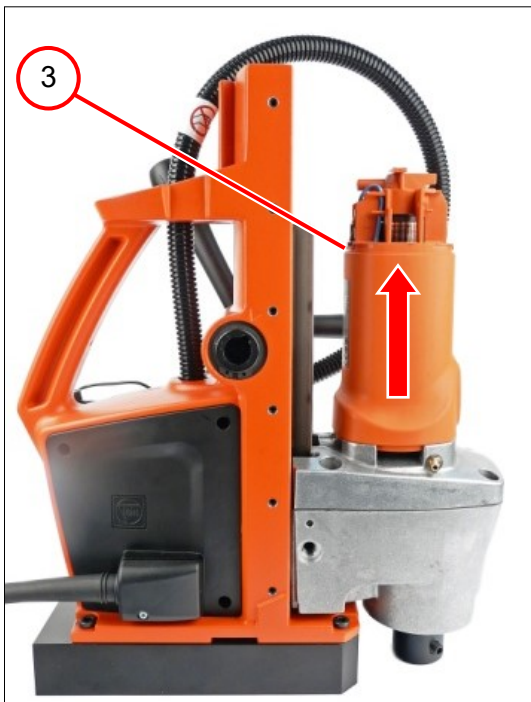

3. Slide the drill motor (3) out of the guide.

8.2.3 Removing the carbon brushes

Steps that must be completed:


- Removing the connecting cable

Tool(s):


- Assembly aid
- Long-nosed pliers




1. Lift up the spring (1).

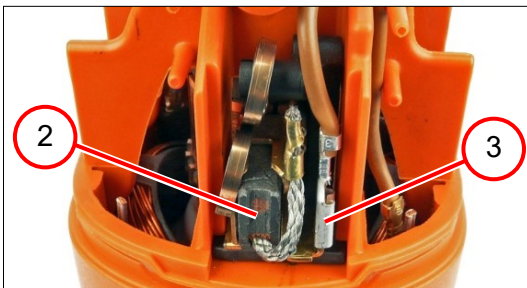

2. Remove the carbon brush (2).
3. Pull off the plug (3).

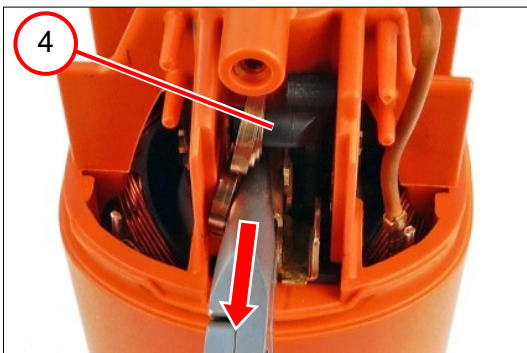

4. Remove the carbon brush holder (4).

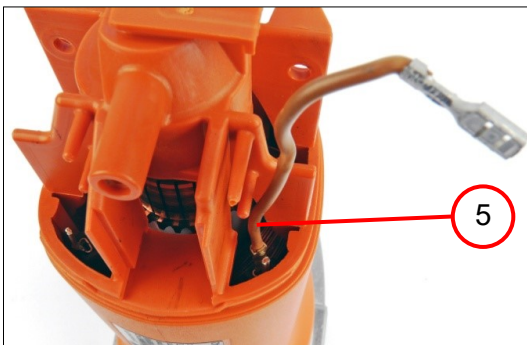

5. Disconnect the cable (5).
6. Repeat steps 1 to 5 on the opposite side of the machine.


8.2.4 Removing the motor housing

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor

Tool(s):

- Socket head wrench, 5 mm

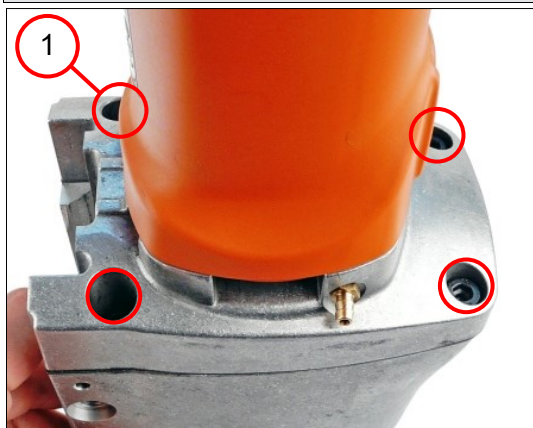

1. Unscrew the four screws (1).

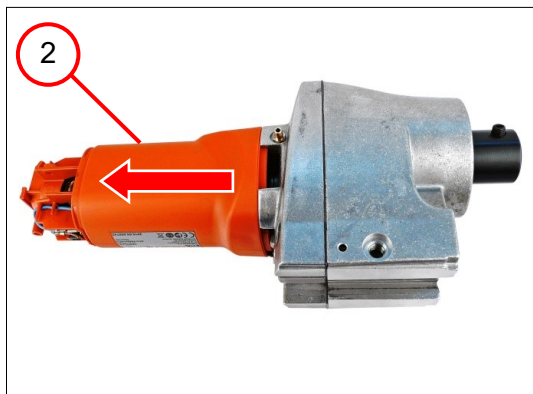

2. Remove the motor housing (2).


8.2.5 Removing the intermediate gear box

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor
- Removing the carbon brushes
- Removing the drill motor

Tool(s):

- Torx T20

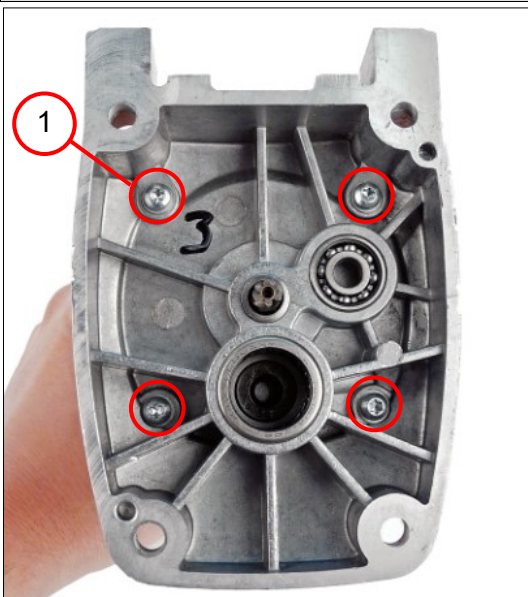

1. Unscrew the four screws (1).

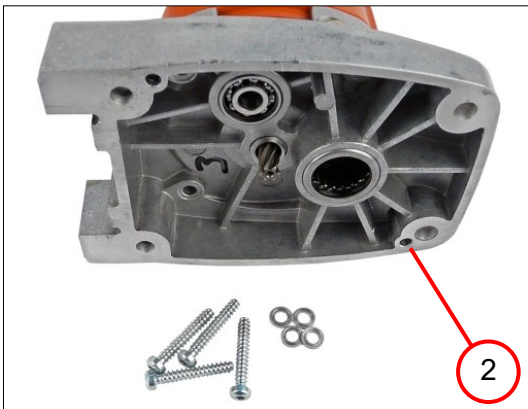

2. Remove the intermediate gear box (2).


8.2.6 Removing the intermediate gear box

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor
- Removing the carbon brushes
- Removing the drill motor
- Removing the intermediate gear box

Tool(s):

- Sleeve
60 mm inner diameter
85 mm outer diameter
- Punch, dia. 7 mm
- Socket wrench
- Socket wrench insert, 7 mm
- Slide hammer
- Inner puller

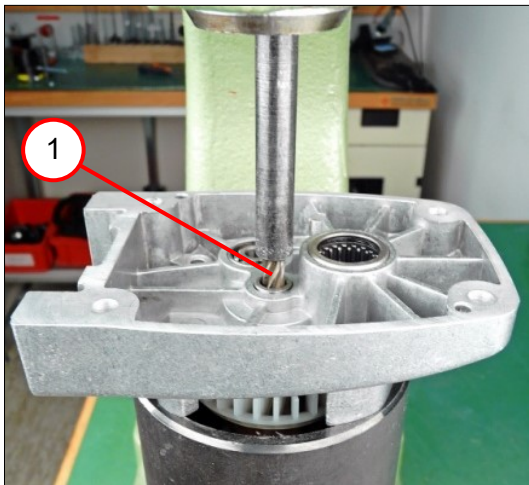


1. Press out the armature (1).

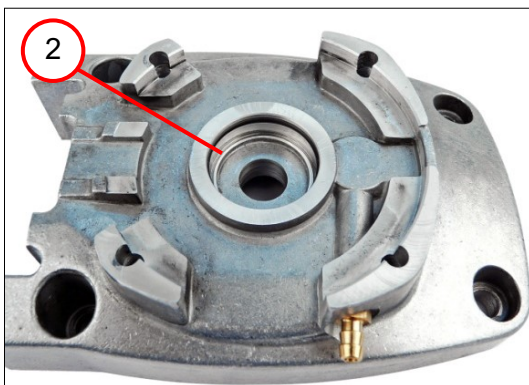


2. Remove the sealing ring (2).


8.2.6 Removing the intermediate gear box

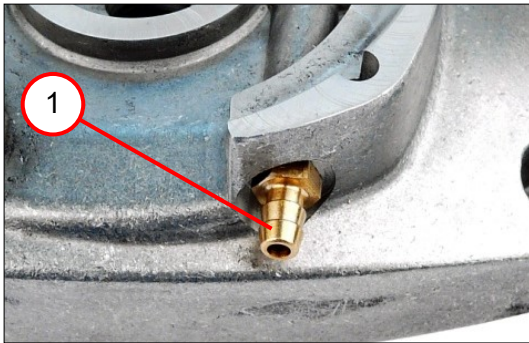

3. Unscrew the hose socket (1).

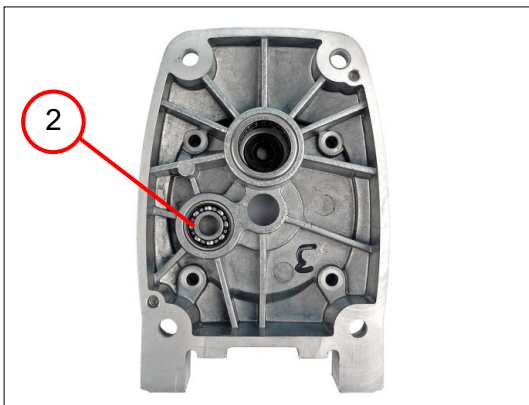

4. Remove the grooved ball bearing (2).

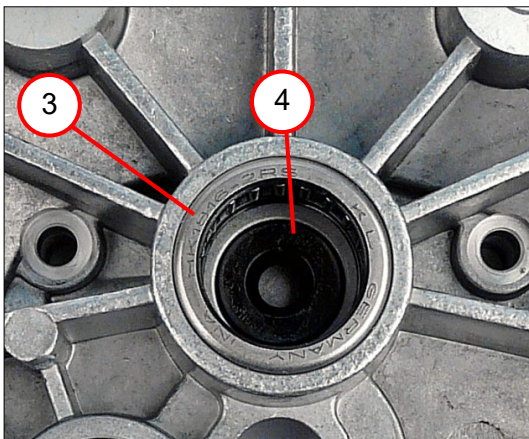

5. Remove the needle sleeve (3).
6. Remove the sealing ring (4).

8.2.7 Removing the armature

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor
- Removing the carbon brushes
- Removing the drill motor
- Removing the intermediate gear box
- Removing the intermediate gear box

Tool(s):

- Drawing-off socket cap
- Chuck cone, 26 mm; 19 mm




1. Remove the grooved ball bearing (1).

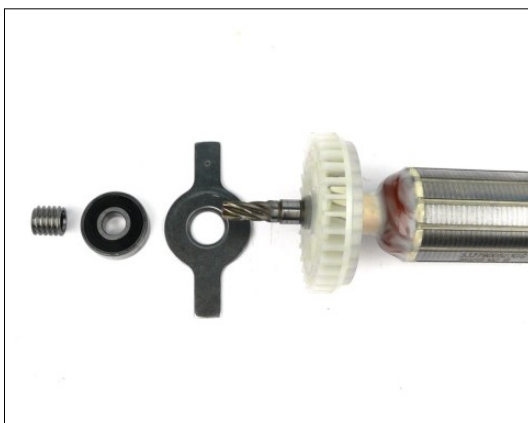

8.2.7 Removing the armature



1. Remove the bearing bush (1).

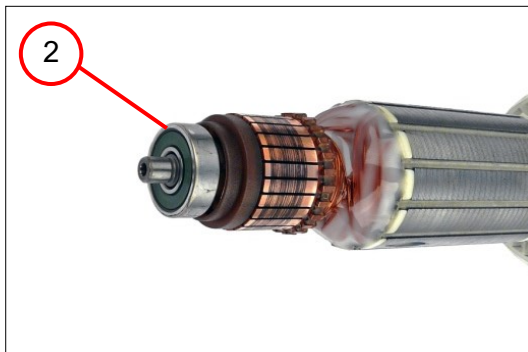

2. Remove the grooved ball bearing (2).

8.2.8 Removing the motor housing

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor
- Removing the carbon brushes
- Removing the drill motor
- Removing the intermediate gear box

Tool(s):


- Slotted screwdriver
- Plastic hammer



1. Remove the air guide ring (1).

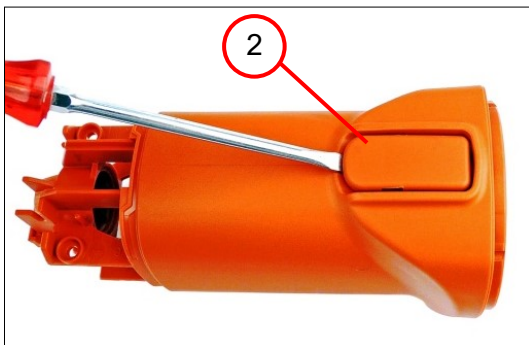

2. Remove the cover (2).

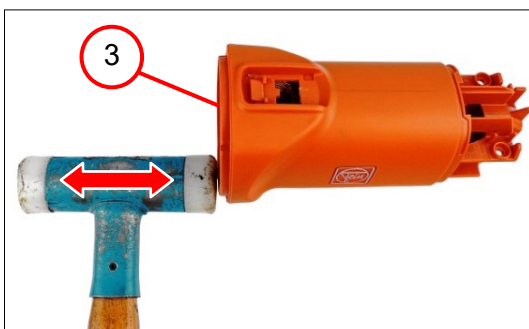

3. Remove the stator (3).

8.3 Removing the gearbox housing


8.3.1 Removing the gearbox parts

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor
- Removing the motor housing

Tool(s):

- Combination pliers
- Circlip pliers
- Plastic hammer

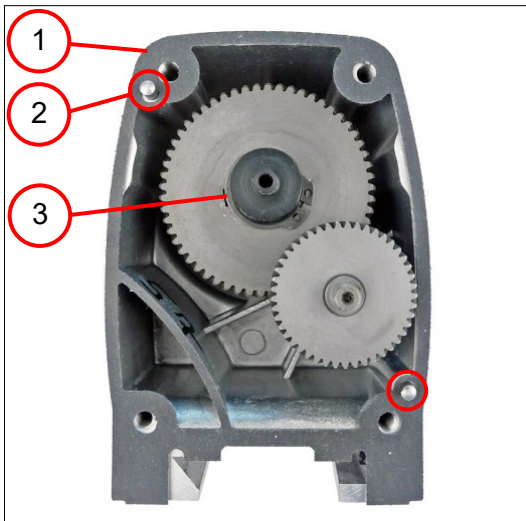

1. Remove the seal (1).
2. Remove the two straight pins (2).
3. Remove the circlip (3).

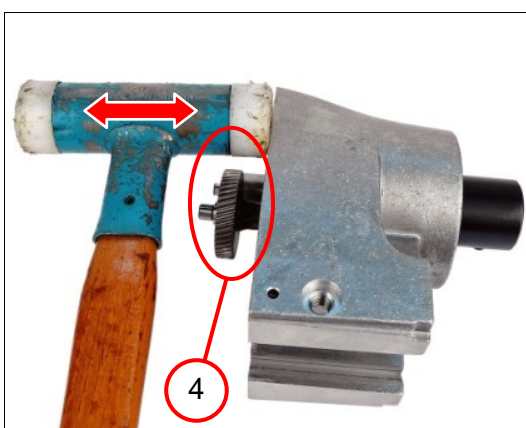

4. Remove the two gear wheels (4).


8.3.2 Removing the shaft

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor
- Removing the motor housing
- Removing the gearbox parts

Tool(s):

- Circlip pliers
- Arbor press

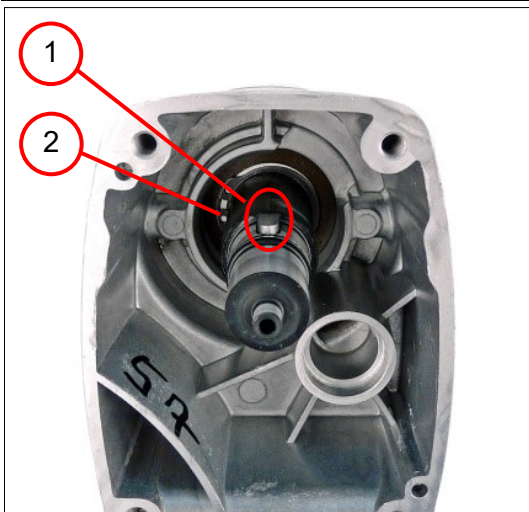

1. Remove the feather key (1).
2. Remove the circlip (2).

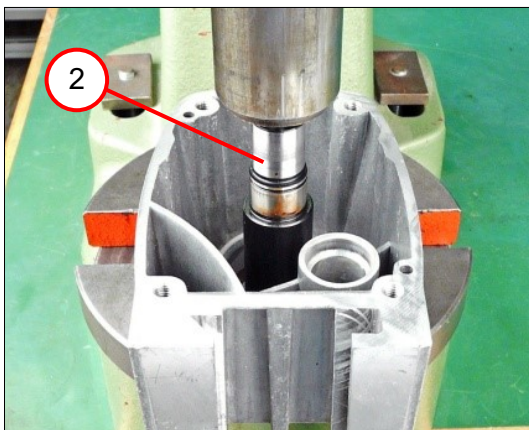

3. Press out the shaft (3).


8.3.3 Removing the gearbox parts

Steps that must be completed:


- Removing the connecting cable
- Removing the drill motor
- Removing the motor housing
- Removing the gearbox parts
- Removing the shaft

Tool(s):

- Circlip pliers
- Arbor press
- Sleeve
10 mm inner diameter; 34 mm outer diameter
- Drawing-off socket cap
- Clamping sleeve, 22 mm diameter

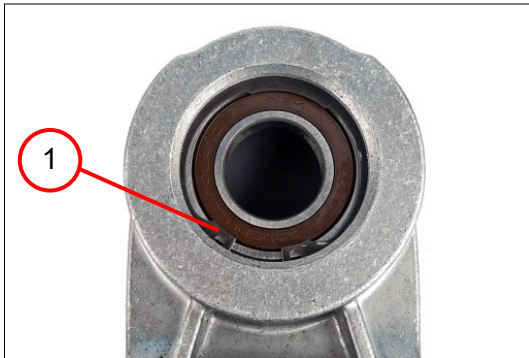


1. Remove the circlip (1).

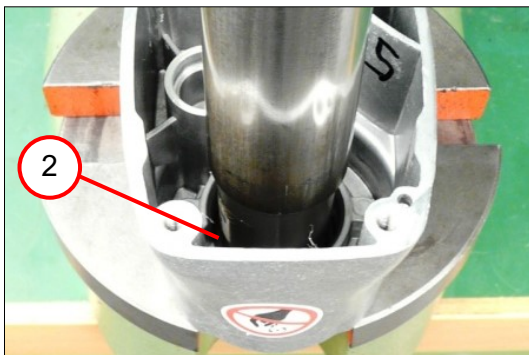


2. Press out the grooved ball bearing (2).

8.3.3 Removing the gearbox parts

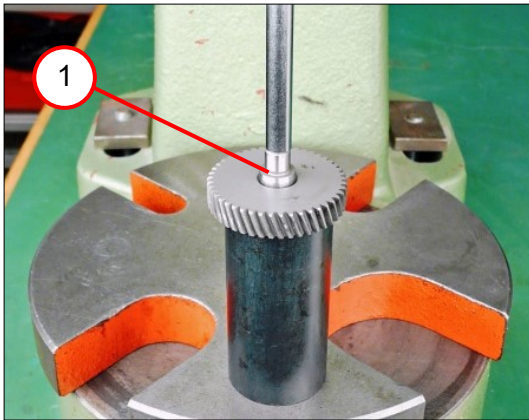

1. Remove the gearwheel (1).

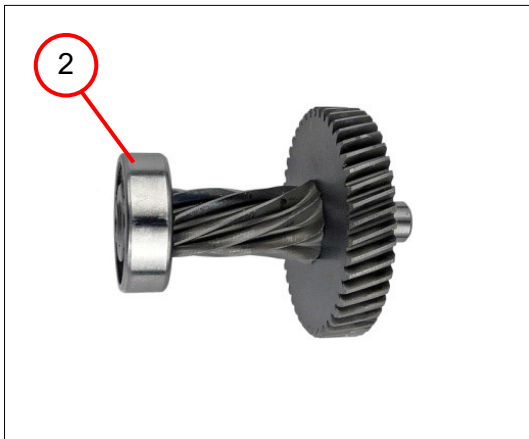

2. Pull off the grooved ball bearing (2).

8.4 Disassembling the drill jig


8.4.1 Removing the control panel

Tool(s):


- Torx T20



1. Unscrew the six screws (1).
2. Remove the holder (2).
3. Remove the cover (3).

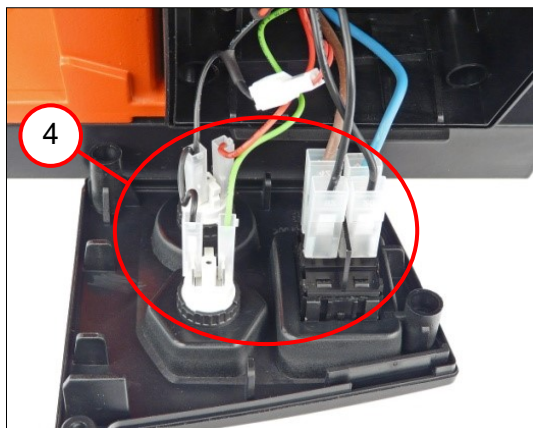

4. Remove all connectors (4).

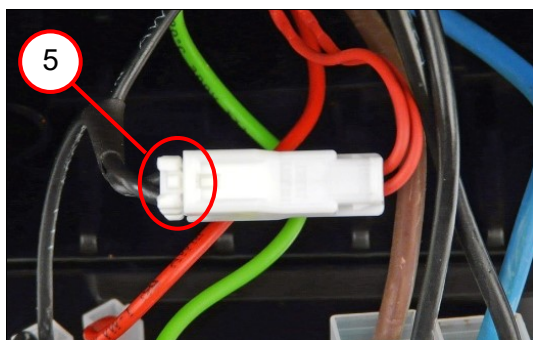

5. Press and hold the lock (5) on the plug.
6. Pull off the plug.

8.4.2 Removing the control panel

Steps that must be completed:

- Removing the control panel



1. Remove the two buttons (1).
2. Remove the switch (2).


8.4.3 Removing the electronics

Steps that must be completed:


- Removing the control panel

Tool(s):


- Torx T15, T20

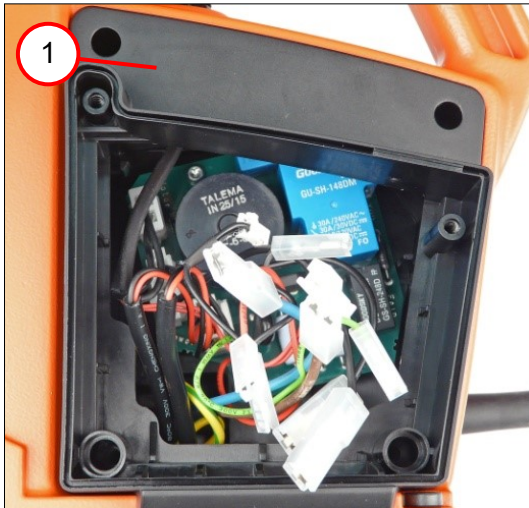

1. Remove the cover (1).

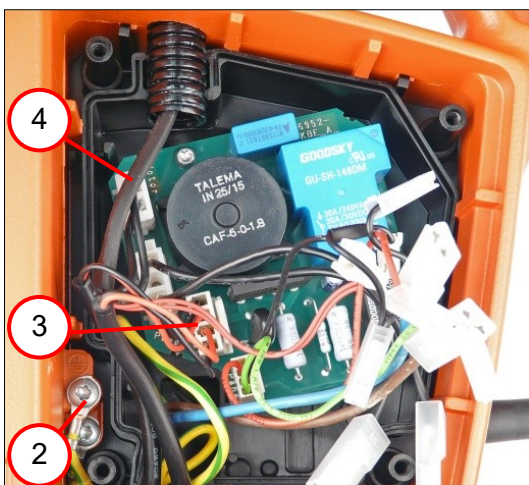


2. Unscrew the screw (2).
3. Disconnect the cable (3).
4. Disconnect the cable (4).

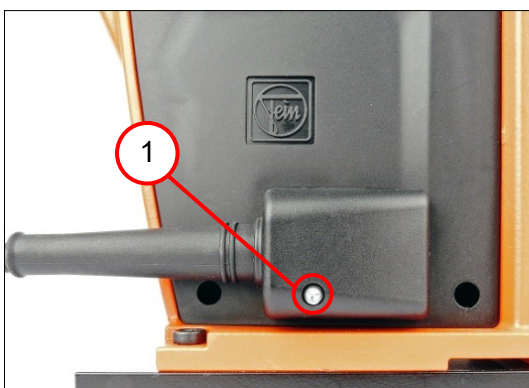

5. Unscrew the screw (1).

8.4.3 Removing the electronics

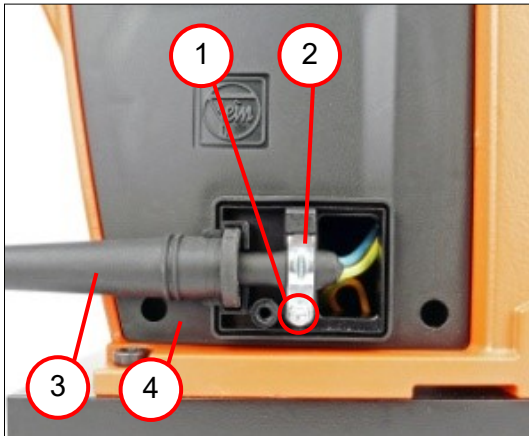

6. Unscrew the screw (1).
7. Remove the cable clamping piece (2).
8. Remove the power cable (3).
9. Remove the cover (4) with the electronics.


8.4.4 Removing the electronics

Steps that must be completed:

- Removing the control panel
- Removing the electronics

Tool(s):

- Torx T20

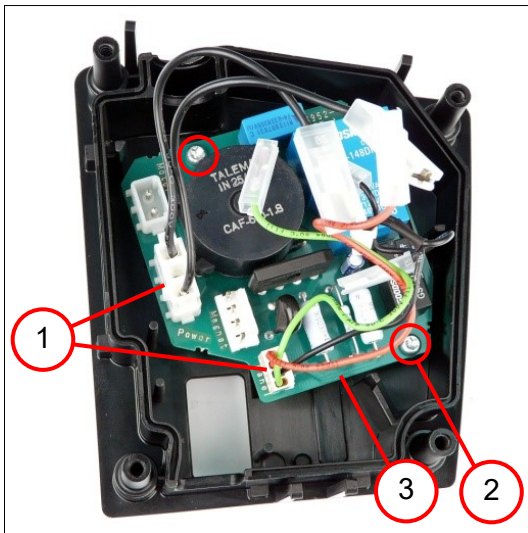

10. Remove the two cables (1).
11. Unscrew the two screws (2).
12. Remove the electronics (3).


8.4.5 Removing the magnetic foot

Steps that must be completed:


- Removing the control panel
- Removing the electronics

Tool(s):

- Torx T20
- Socket head wrench, 5 mm

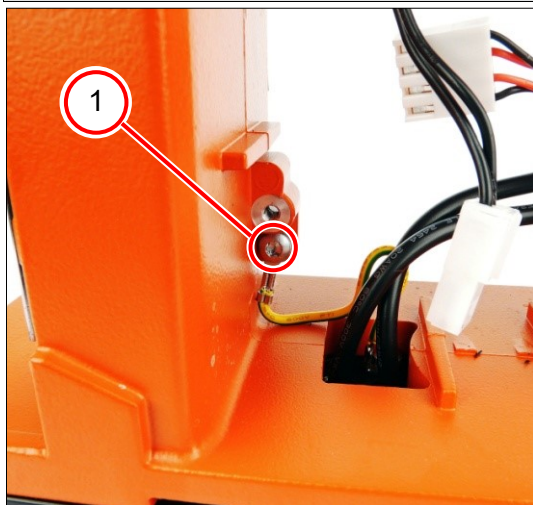

1. Unscrew the screw (1).

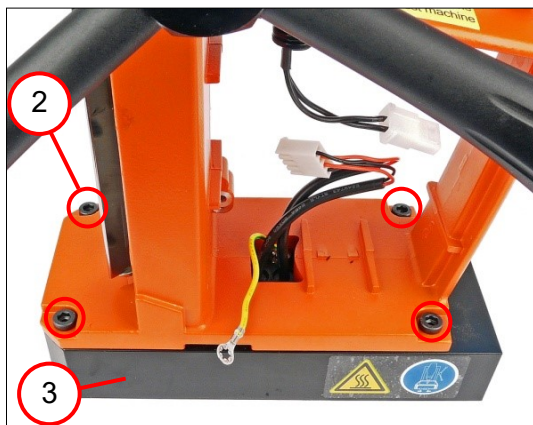

2. Unscrew the four screws (2).
3. Remove the magnetic foot (3).

Photo shows similar product


8.4.6 Removing the magnetic foot

Steps that must be completed:

- Removing the control panel
- Removing the electronics
- Removing the magnetic foot

Tool(s):

- PH2 cross-head screwdriver

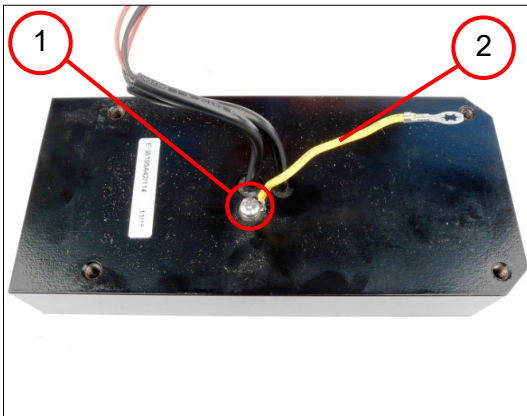

1. Unscrew the screw (1).
2. Remove the cable (2).

8.4.7 Removing the protective hose


Steps that must be completed:

- Removing the control panel
- Removing the electronics



Photo shows similar product

1. Remove the protective hose (1).

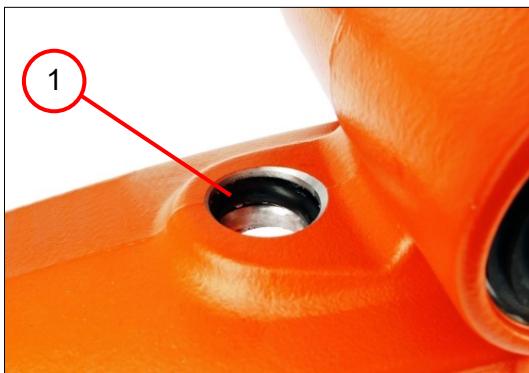

2. Remove the sealing ring (2).


8.4.8 Disassembling protective hose

Steps that must be completed:


- Removing the control panel
- Removing the electronics
- Removing the magnetic foot
- Removing the protective hose

Tool(s):

- Circlip pliers

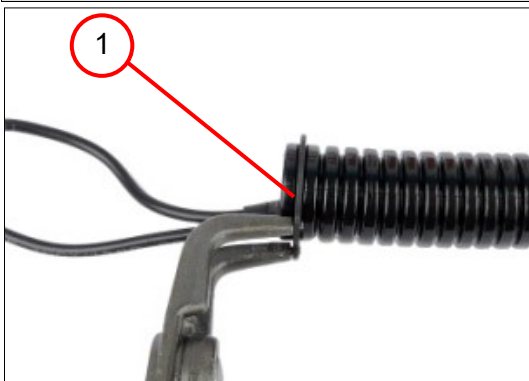

1. Remove the circlip (1).

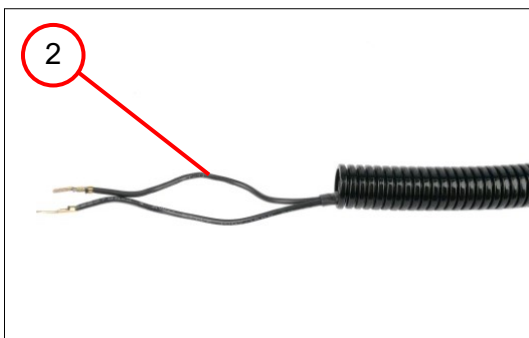

2. Remove the connecting cable (2).

Photo shows similar product


8.4.9 Removing the guide

Steps that must be completed:


- Removing the container
- Removing the connecting cable
- Removing the drill motor

Tool(s):

- Socket head wrench, 2.5 mm; 3 mm; 4 mm
- Slotted screwdriver
- PH2 cross-head screwdriver

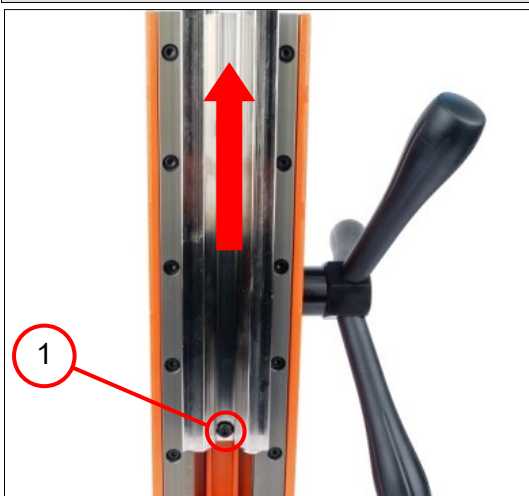

1. Unscrew the screw (1).
2. Move the guide upwards using the spider.
3. Remove the guide.

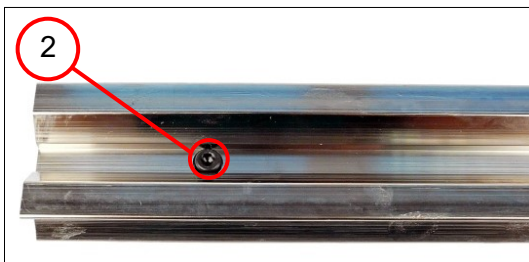


4. Unscrew the screw (2).



5. Unscrew the flat-head screw (3).

8.4.9 Removing the guide

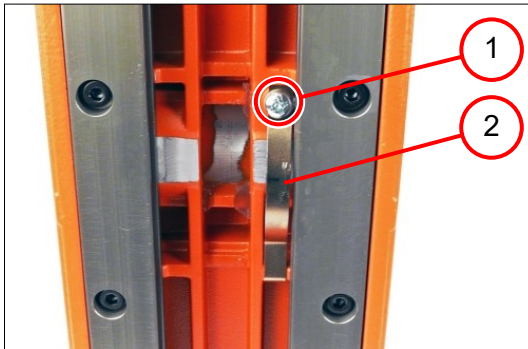


6. Unscrew the screw (1).
7. Remove the leaf spring (2).




8. Unscrew the six set screws (3).

8.4.9 Removing the guide

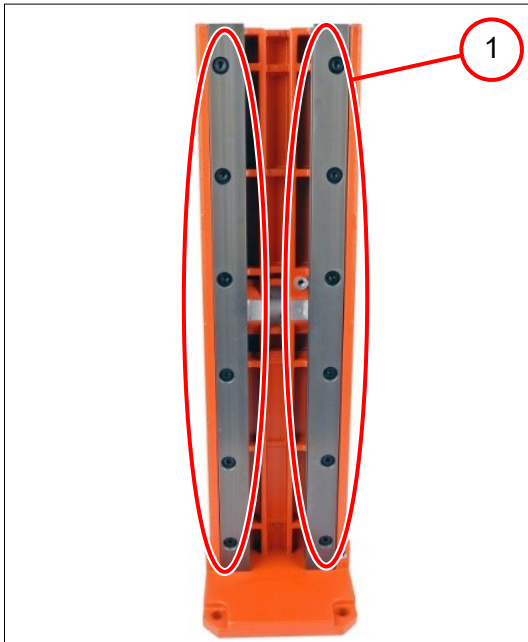

9. Unscrew the twelve screws (1).
10. Remove the two guide strips.

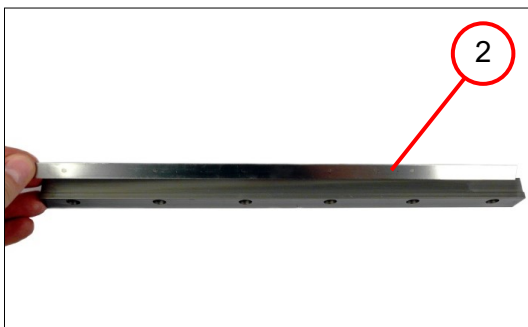

11. Remove the pressure piece (2).

8.4.10 Removing the spider

Steps that must be completed:


- Removing the electronics
- Removing the drill motor
- Removing the guide

Tool(s):


- Circlip pliers
- Inner bearing puller, 18–22 mm
- Slide hammer



1. Remove the circlip (1).

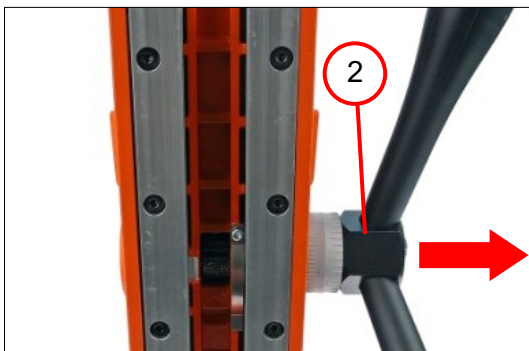

2. Remove the spider (2).

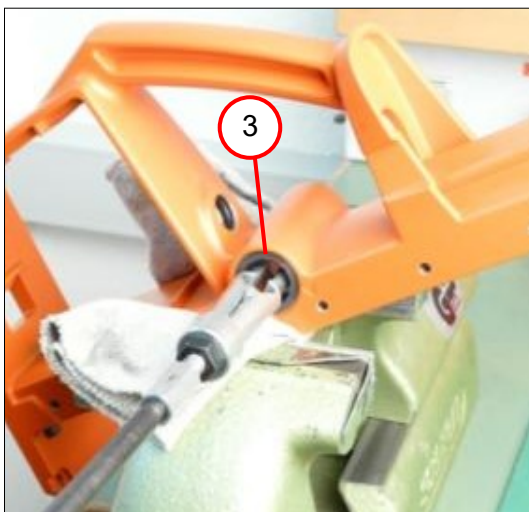

3. Remove bush (3).

4. Repeat step 3 on the opposite side of the machine.

8.4.11 Removing the spider

Steps that must be completed:


- Removing the electronics
- Removing the drill motor
- Removing the guide
- Removing the spider

Tool(s):

- Socket head wrench, 5 mm



1. Remove the disc (1).

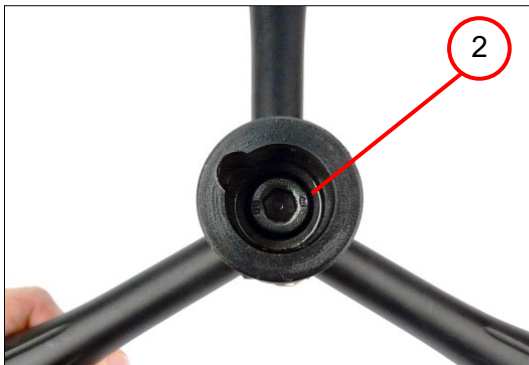

2. Unscrew the screw (2).
3. Remove the shaft.



4. Remove the scale (3).
5. Unscrew the three handles (4).


9 Fitting

9.1 Assembling the drill jig


9.1.1 Fitting the spider

Tool(s):

- Socket head wrench, 5 mm

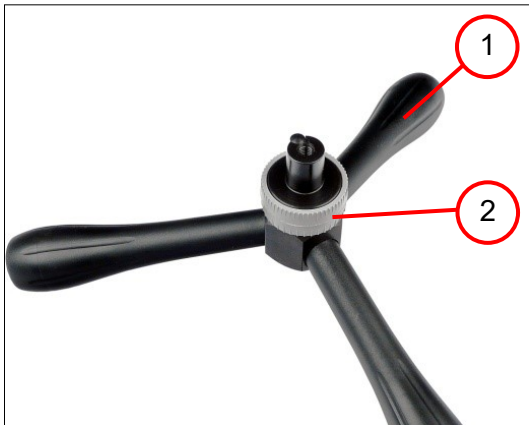

1. Screw in the three handles (1).
2. Position the scale (2).

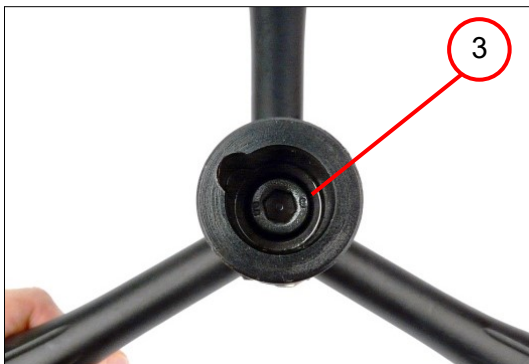

3. Position the shaft.
4. Screw in the screw (3) [8.0 Nm ± 0.5 Nm].



5. Position the disc (4).
6. Coat the shaft with grease.


9.1.2 Positioning the spider

Steps that must be completed:


- Fitting the spider

Tool(s):

- Arbor press
- Sleeve
26 mm inner diameter; 30 mm outer diameter
- Circlip pliers

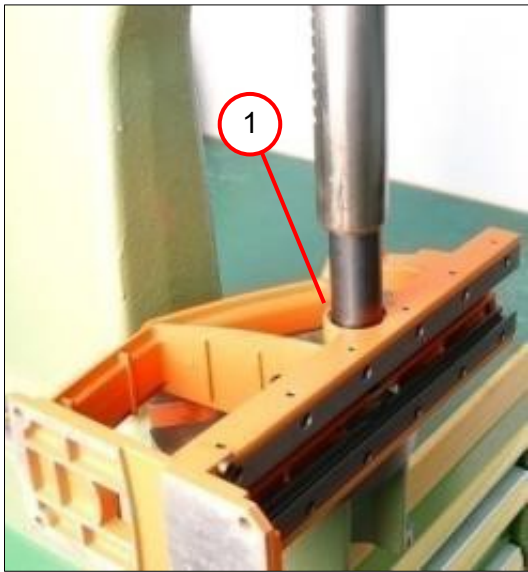

1. Press in the bush (1).
2. Repeat step 1 on the opposite side of the machine.

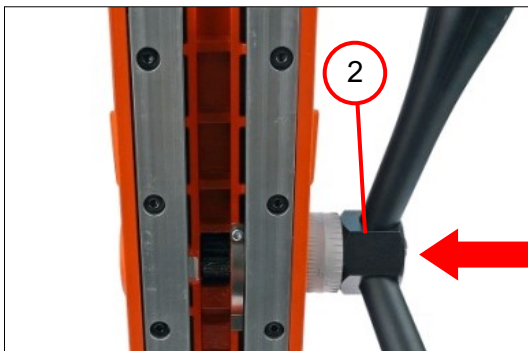

3. Position the spider (2).



4. Position the circlip (3).


9.1.3 Positioning the guide

Steps that must be completed:


- Fitting the spider
- Positioning the spider

Tool(s):

- PH2 cross-head screwdriver
- Slotted screwdriver
- Socket head wrench, 2.5 mm; 3 mm; 4 mm

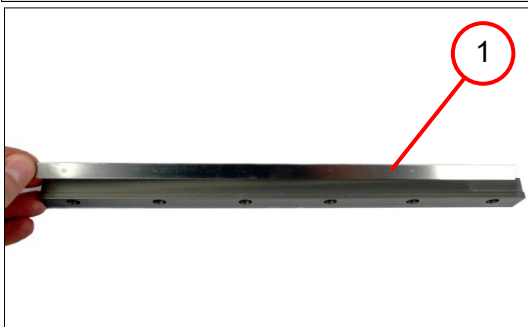

1. Place the pressure piece (1) in the correct position.

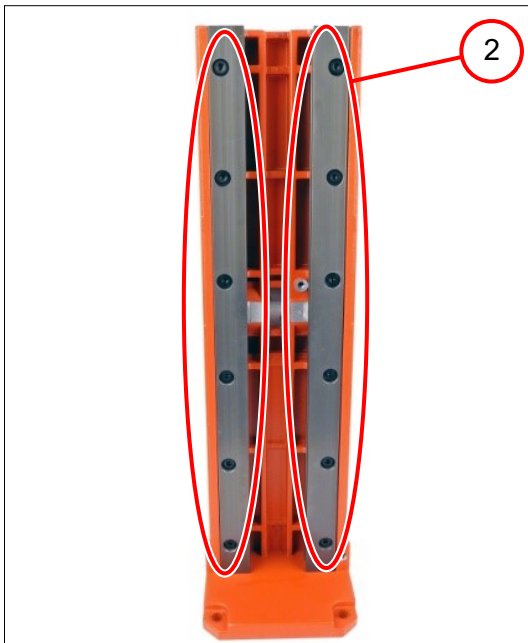

2. Screw in the twelve screws (2).
3. Remove the two guide strips.

9.1.3 Positioning the guide




4. Unscrew the six set screws (1).



INFORMATION

The thread play is adjusted after installation of the drill motor.

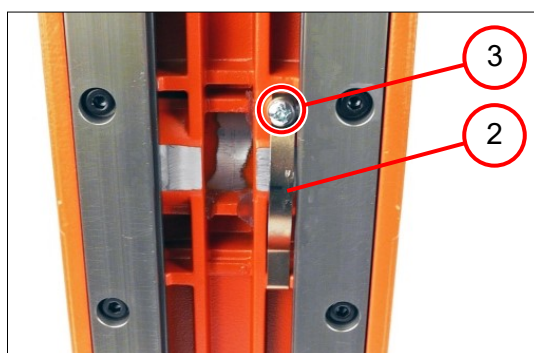


5. Position the leaf spring (2).
6. Screw in the screw (3) [1.1 Nm ± 0.15 Nm].


9.1.3 Positioning the guide




7. Screw in the flat-head screw (1) [1.2 Nm ± 0.15 Nm].

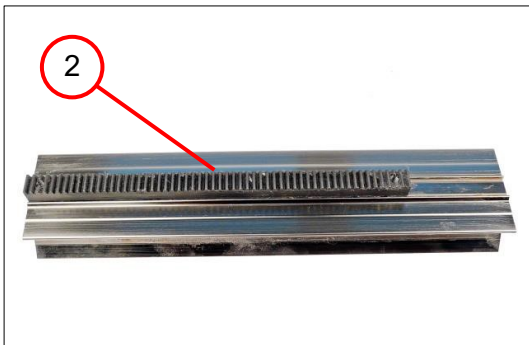

8. Position the gear rack (2).
9. Coat the gear rack (2) and the guide with grease.

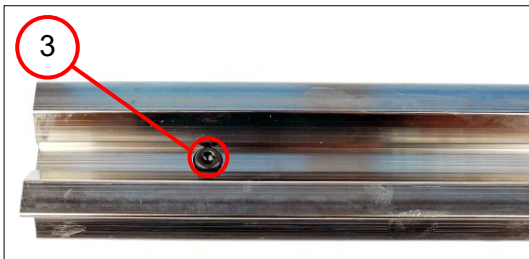

10. Screw in the screw (3) [3.0 Nm ± 0.3 Nm].

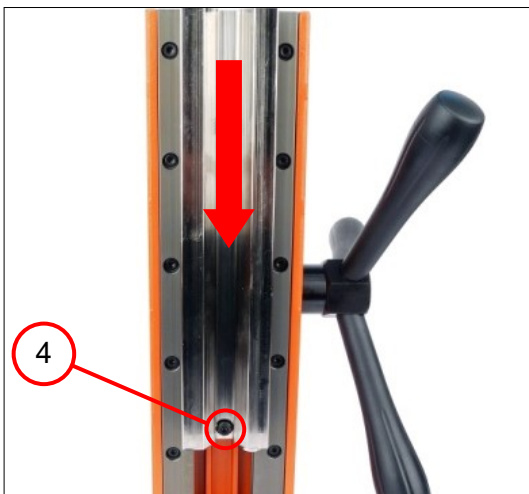

11. Position the guide.
12. Move the guide downwards using the spider.
13. Screw in the screw (4) [3.0 Nm ± 0.3 Nm].

9.1.4 Fitting the protective hose

Tool(s):

- Circlip pliers


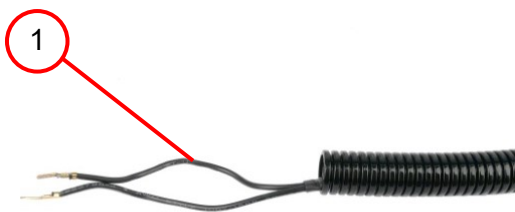


Photo shows similar product

1. Position the connecting cable (1).

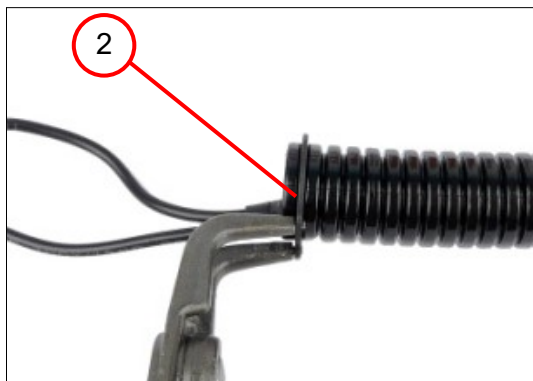


2. Position the circlip (2).

9.1.5 Positioning the protective hose

Steps that must be completed:

- Fitting the protective hose

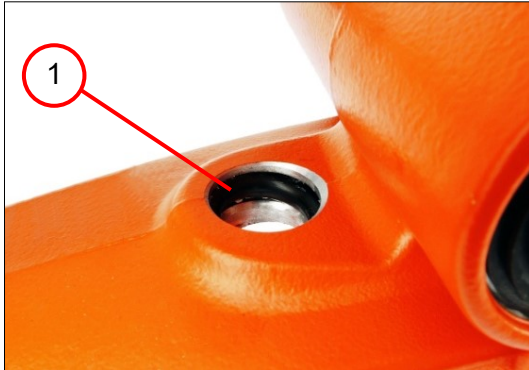

1. Position the sealing ring (1).




2. Position the protective hose (2).

Photo shows similar product

9.1.6 Fitting the magnetic foot

Tool(s):

- PH2 cross-head screwdriver

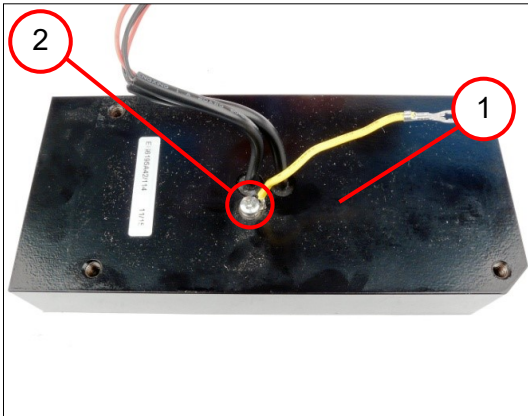

1. Position the cable (1).
2. Screw in the screw (2) [1.5 Nm ± 0.2 Nm].


9.1.7 Positioning the magnetic foot

Steps that must be completed:


- Fitting the magnetic foot

Tool(s):

- Socket head wrench, 5 mm
- Torx T20

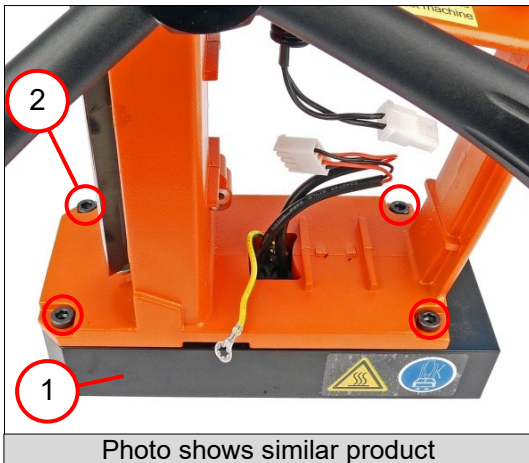

1. Position the magnetic foot **(1)**.
2. Screw in the four screws **(2)** [8.0 Nm ± 0.5 Nm].

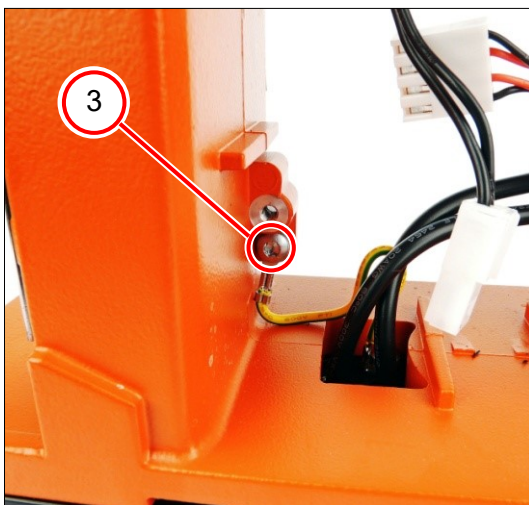


3. Position the connecting cable.
4. Screw in the screw **(3)** [1.5 Nm ± 0.2 Nm].

9.1.8 Fitting the electronics

Tool(s):

- Torx T20

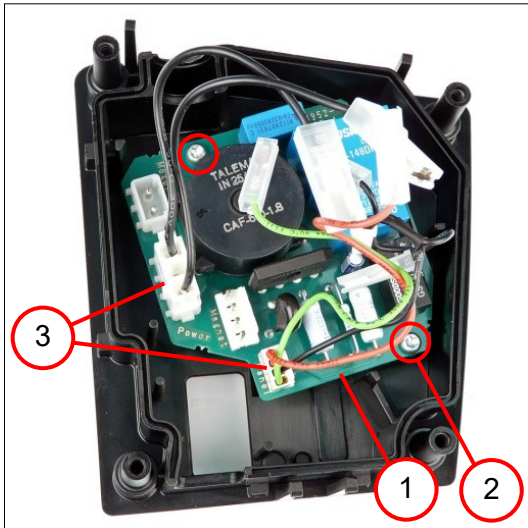

1. Position the electronics (1).
2. Screw in the two screws (2).
3. Connect the two cables (3) as shown in the connection diagram.


9.1.9 Positioning the electronics

Steps that must be completed:


- Fitting the electronics

Tool(s):


- Torx T15, T20

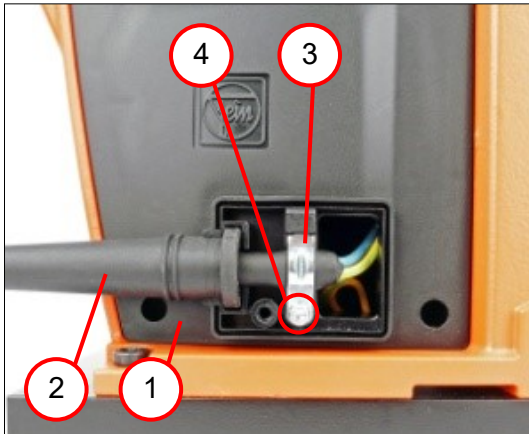

1. Position the cover (1) with the electronics.
2. Position the power cable (2).
3. Position the cable clamping piece (3).
4. Screw in the screw (4) [0.9 Nm ± 0.1 Nm].

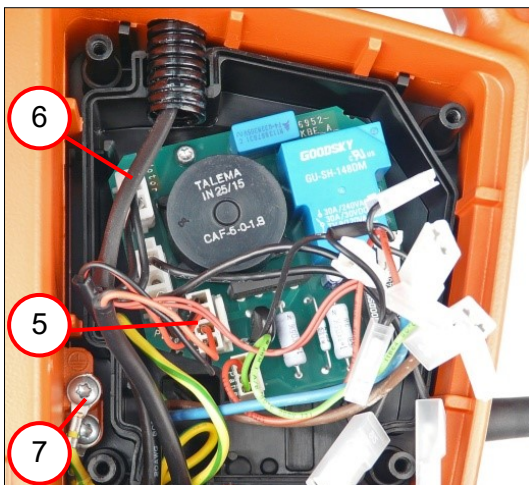


5. Connect the cable (5) as shown in the connection diagram.
6. Connect the cable (6) as shown in the connection diagram.
7. Screw in the screw (7) [1.5 Nm ± 0.2 Nm].

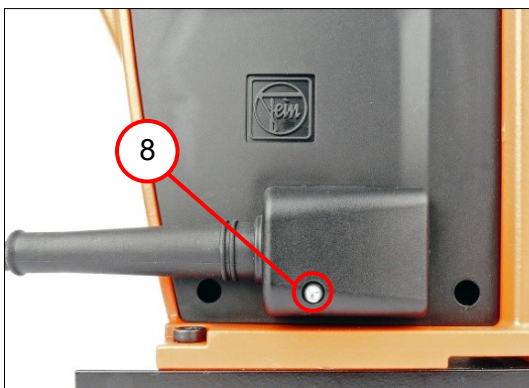

8. Screw in the screw (8) [0.9 Nm ± 0.1 Nm].

9.1.9 Positioning the electronics

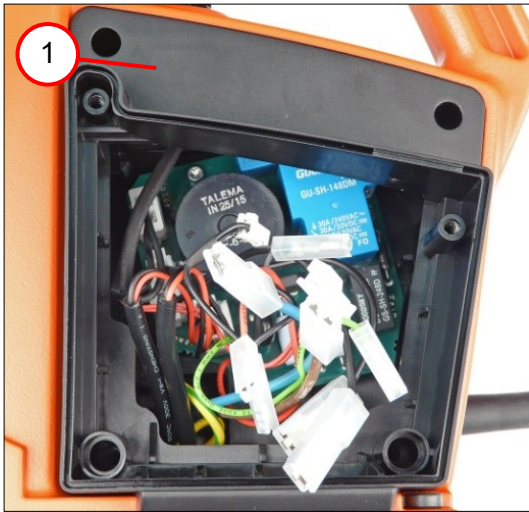

9. Position the cover (1).

9.1.10 Fitting the control panel



1. Position the two buttons (1).
2. Position the switch (2).


9.1.11 Positioning the control panel

Steps that must be completed:


- Fitting the electronics
- Positioning the electronics
- Fitting the control panel

Tool(s):

- Torx T20

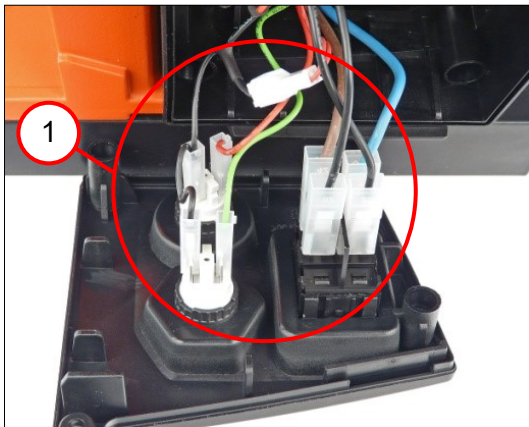

1. Connect all connectors (1) as shown in the connection diagram.

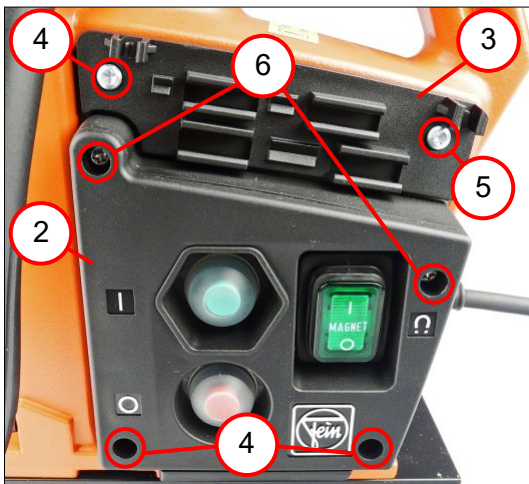


2. Position the cover (2).
3. Position the holder (3).
4. Screw in the three screws [4x48] (4) [1.7 ±0.3 Nm].
5. Screw in the screw [4x35] (5) [1.7 ±0.3 Nm].
6. Screw in the two screws [4x18] (6) [1.7 ±0.3 Nm].

9.2 Fitting the gearbox housing


9.2.1 Fitting the gearbox parts

Tool(s):


- Clamping sleeve, 22 mm diameter
- Sleeve
11 mm inner diameter; 25 mm outer diameter
8 mm inner diameter; 22 mm outer diameter
30 mm inner diameter; 45 mm outer diameter
- Arbor press
- Circlip pliers

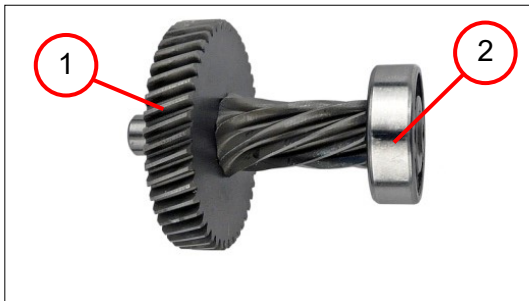

1. Press on the gearwheel (1).
2. Press on the grooved ball bearing (2).

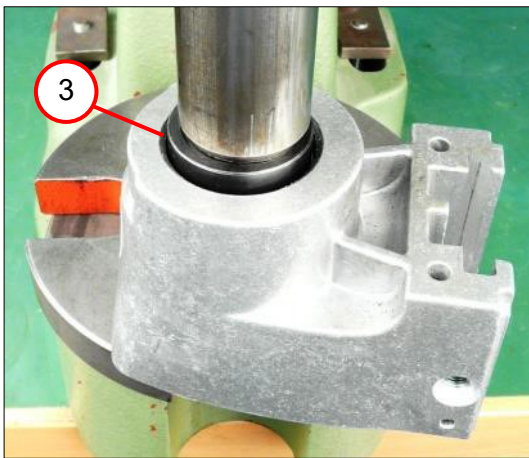

3. Press in the grooved ball bearing (3).

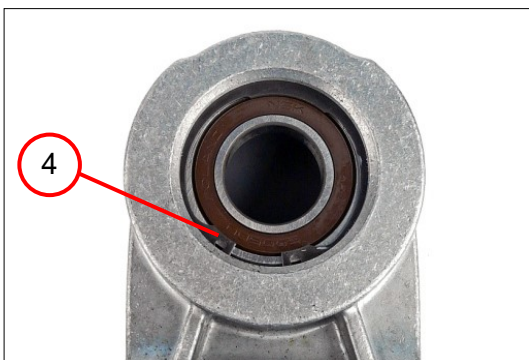

4. Position the circlip (4).


9.2.2 Positioning the shaft

Steps that must be completed:


- Fitting the gearbox parts

Tool(s):

- Sleeve
11 mm inner diameter; 25 mm outer diameter
- Circlip pliers

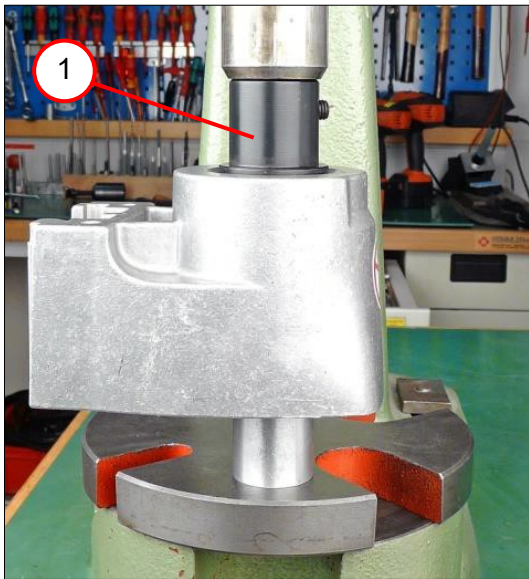

1. Press in the shaft (1).

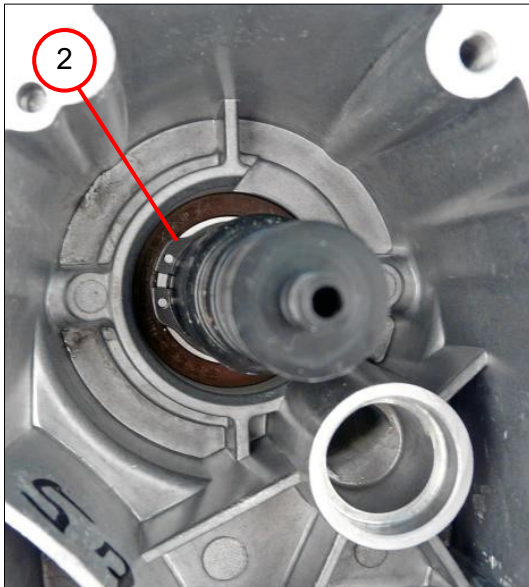

2. Position the circlip (2).

9.2.3 Positioning the gearbox parts

Steps that must be completed:


- Fitting the gearbox parts
- Positioning the shaft

Tool(s):

- Circlip pliers




1. Position the feather key (1).

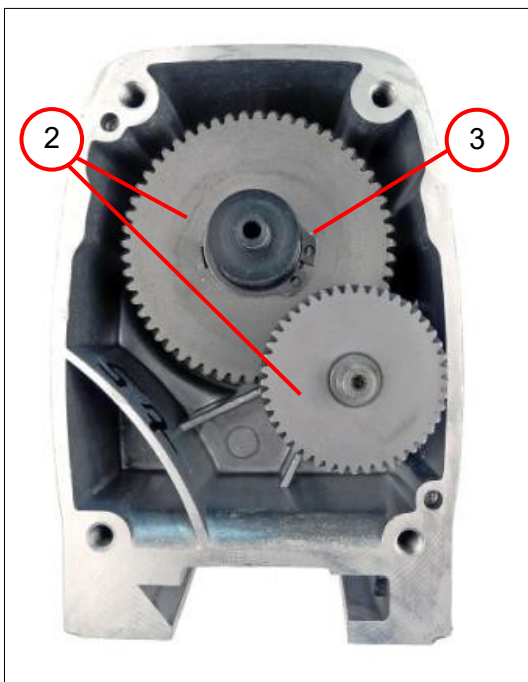

2. Insert the two gear wheels (2).
3. Insert the circlip (3).

9.2.3 Positioning the gearbox parts

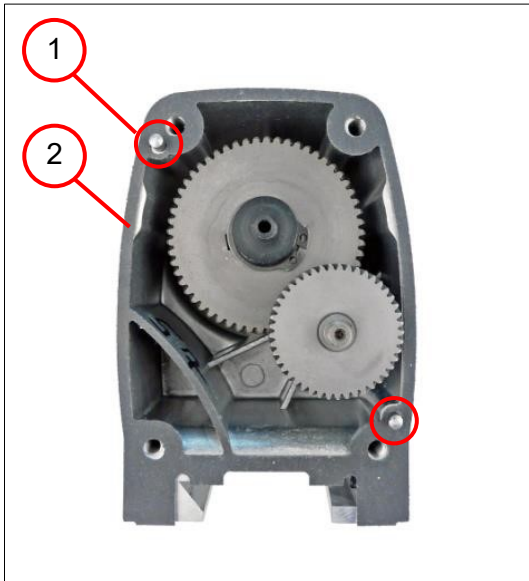

4. Position the two straight pins (1).



INFORMATION

Use a new seal for each new fitting.

5. Position the seal (2).
6. Fill the gearbox with 130 g grease.

9.3 Fitting the motor housing

9.3.1 Fitting the motor housing

Tool(s):

- Arbor press
- Pressure piece
- 4x round material,
diameter 20 mm;
length 60 mm



1. Press in the stator (1).



2. Position the cover (2).




3. Position the air guide ring (3).


9.3.2 Fitting the armature

Tool(s):

- Arbor presses
- Sleeve
8 mm inner diameter; 20 mm outer diameter
7 mm inner diameter; 26 mm outer diameter

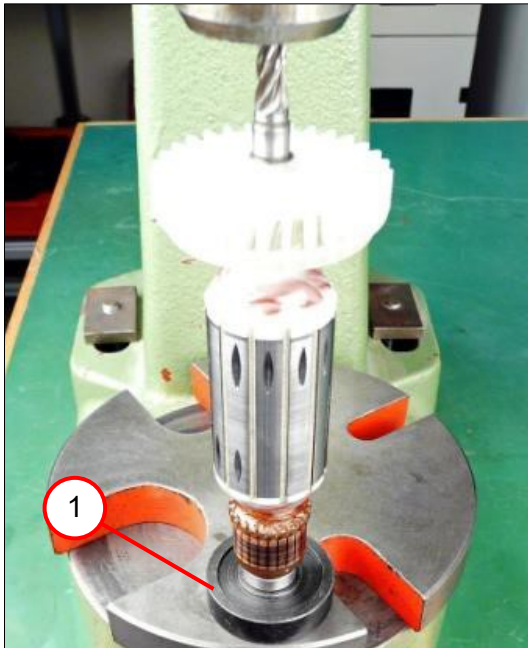


1. Press on the grooved ball bearing (1).

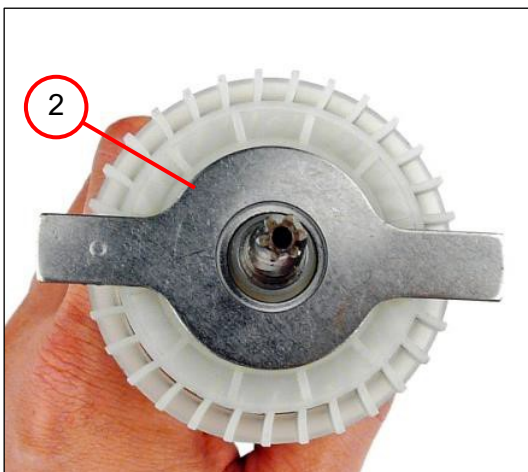

2. Position the plate (2).

9.3.2 Fitting the armature

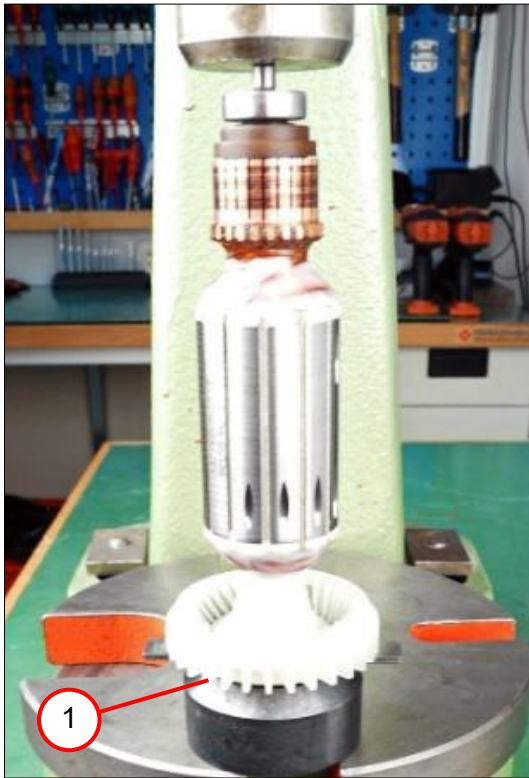

3. Press on the grooved ball bearing (1).



4. Press on the sealing ring (2).

9.3.2 Fitting the armature



5. Position the bearing bush (1).


9.3.3 Fitting the intermediate gear box

Steps that must be completed:


- Fitting the armature

Tool(s):


- Arbor press
- Sleeve
8 mm inner diameter; 18 mm outer diameter
15 mm inner diameter; 24 mm outer diameter
- Socket wrench
- Socket wrench insert, 7 mm – ¼"

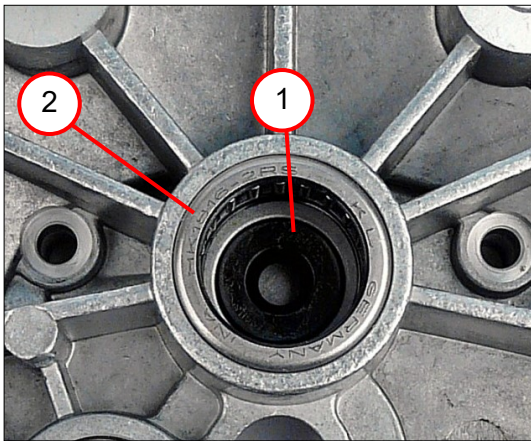

1. Press in the needle sleeve (1).
2. Grease the sealing ring (2).
3. Position the sealing ring (2).

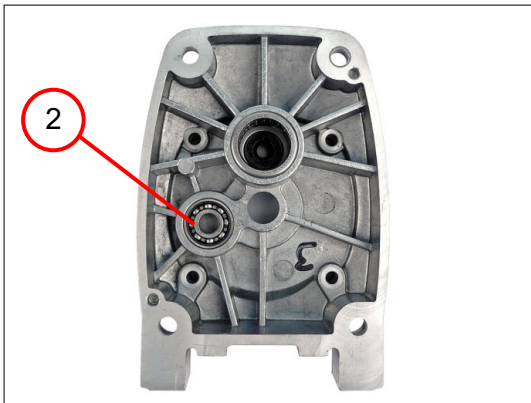


4. Press in the grooved ball bearing (2).

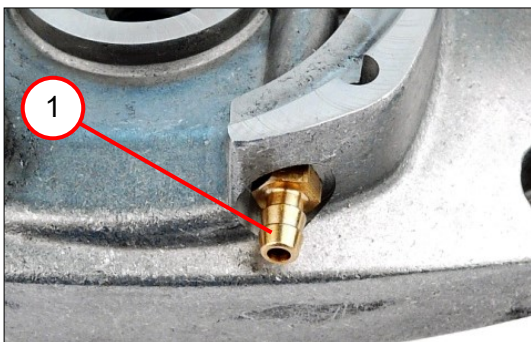


5. Screw in the hose socket (1) [1.8 Nm ± 0.1 Nm].

9.3.3 Fitting the intermediate gear box

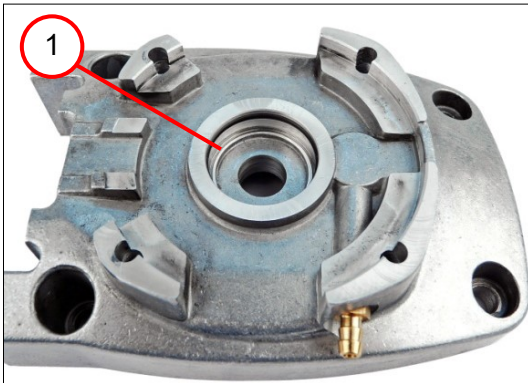

6. Grease the sealing ring (1).
7. Position the sealing ring (1).

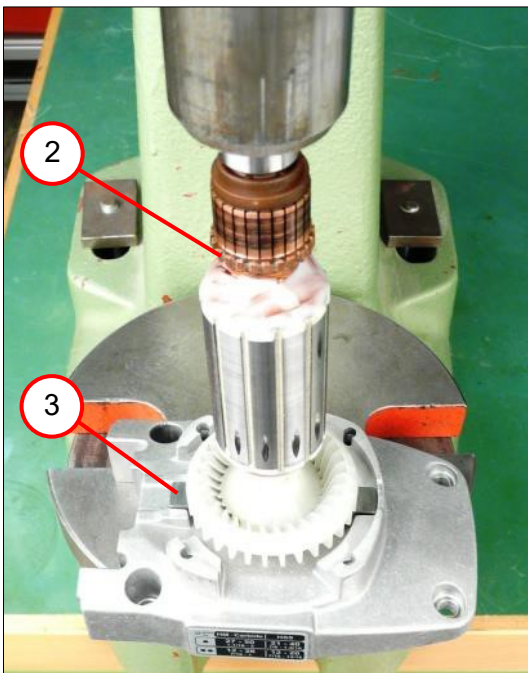

! PLEASE NOTE:

Damage to the armature.

The armature (2) can be damaged by an incorrectly positioned plate (3).

Pay attention to the position of the plate (3).

8. Press in the armature (2).

9.3.4 Positioning the intermediate gear box

Steps that must be completed:


- Fitting the armature
- Fitting the intermediate gear box

Tool(s):

- Torx T20



1. Position the motor housing (1).

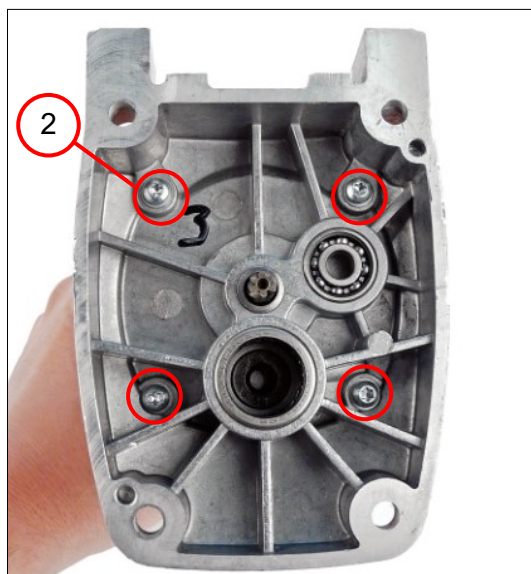

INFORMATION

Use new sealing rings for each new fitting.

2. Screw in the four screws with the sealing ring (2) [1.8 Nm $\pm$ 0.1 Nm].


9.3.5 Positioning the motor housing

Steps that must be completed:


- Fitting the gearbox parts
- Positioning the shaft
- Fitting the armature
- Fitting the intermediate gear box

Tool(s):

- Socket head wrench, 5 mm

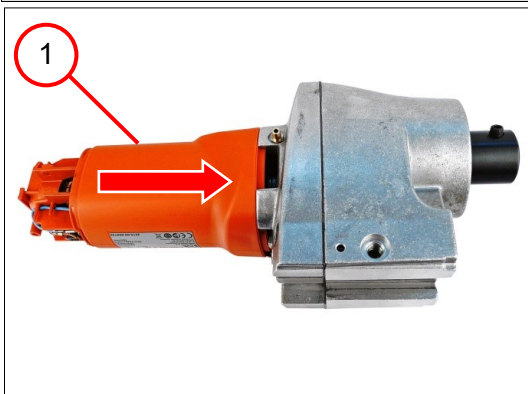

1. Position the motor housing (1).

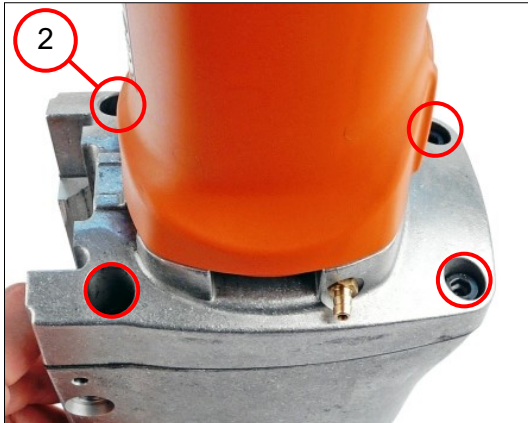

2. Screw in the four screws (2) [8.0 Nm ± 0.3 Nm].


9.3.6 Positioning the carbon brushes

Steps that must be completed:


- Fitting the gearbox parts
- Positioning the shaft
- Fitting the motor housing
- Fitting the armature
- Fitting the intermediate gear box
- Positioning the intermediate gear box
- Positioning the motor housing

Tool(s):

- Long-nosed pliers
- Assembly aid

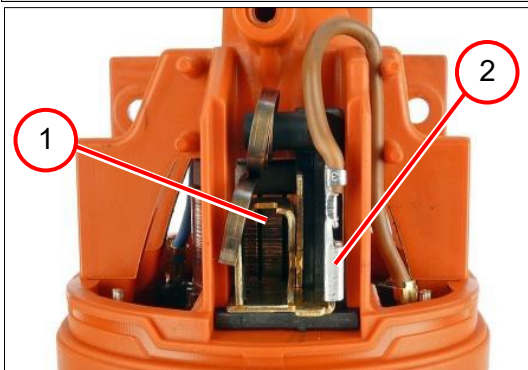

1. Position the carbon brush holder (1).
2. Connect the cable (2) as shown in the connection diagram.

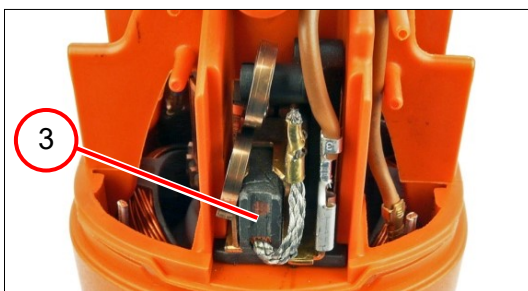

3. Position the carbon brush (2).
4. Connect the carbon brush (2) as shown in the connection diagram.



5. Position the spring (4).
6. Repeat steps 1 to 5 on the opposite side of the machine.

9.3.7 Positioning the drill motor

Steps that must be completed:


- Fitting the gearbox parts
- Positioning the shaft
- Fitting the motor housing
- Fitting the armature
- Fitting the intermediate gear box
- Positioning the intermediate gear box
- Positioning the motor housing
- Positioning the carbon brushes

Tool(s):

- Socket head wrench, 6 mm
- Slotted screwdriver



1. Place the pressure piece (1) in the correct position.

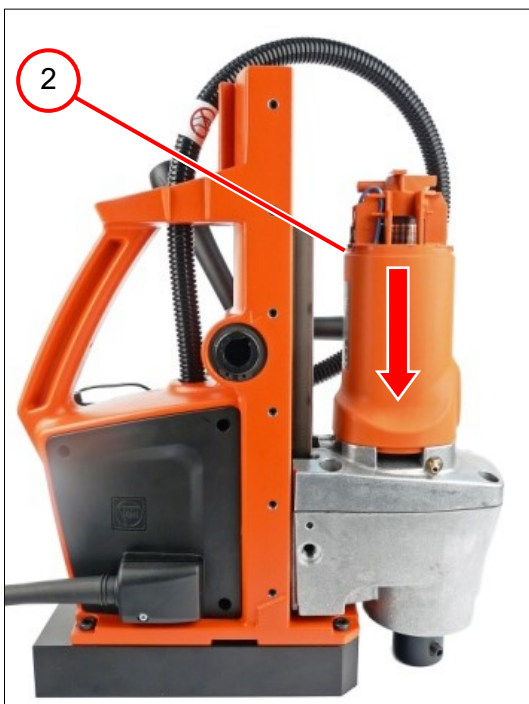

CAUTION!


Crushing hazard around the drill motor

Crushing can occur.

Move the drill motor down using the spider, before the screw (2) is unscrewed.

2. Slide the drill motor (2) into the guide.

9.3.7 Positioning the drill motor

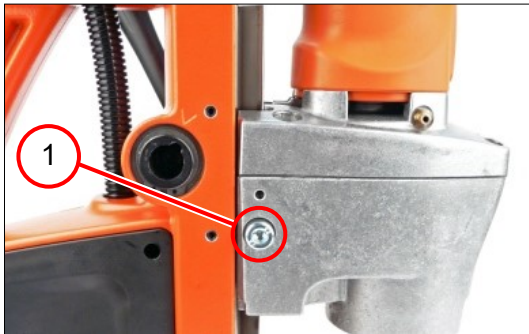

3. Screw in the screw (1).



4. Screw in the flat-head screw (2) [1.2 Nm ± 0.15 Nm].


9.3.8 Positioning the connecting cable

Steps that must be completed:


- Fitting the gearbox parts
- Positioning the shaft
- Fitting the motor housing
- Fitting the armature
- Fitting the intermediate gear box
- Positioning the intermediate gear box
- Positioning the motor housing
- Positioning the carbon brushes
- Positioning the drill motor

Tool(s):


- Torx T15

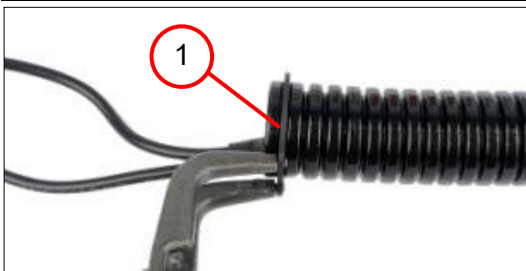

1. Position the circlip (1).

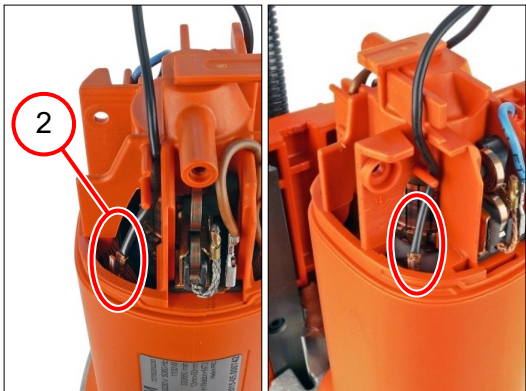


2. Connect the two strands (2) as shown in the connection diagram.

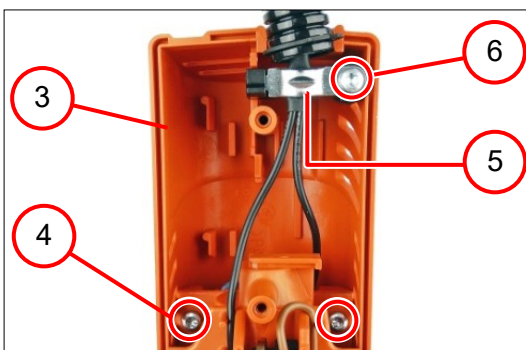

3. Position the cover (3).
4. Screw in the two screws (4) [1.6 Nm ± 0.25 Nm].
5. Position the cable clamping piece (5).
6. Screw in the screw (6) [1.6 Nm ± 0.25 Nm].

9.3.8 Positioning the connecting cable

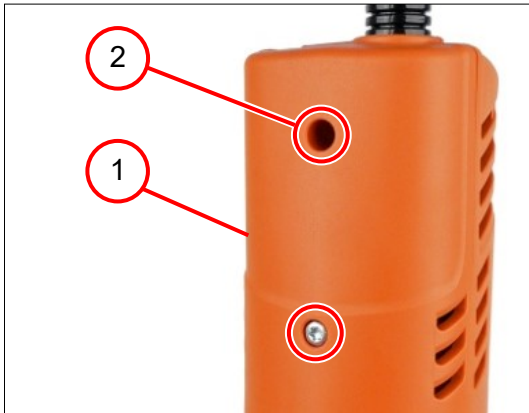

7. Position the cover (1).
8. Screw in the two screws (2) [1.6 Nm ± 0.25 Nm].



9.4 Setting the guide

Tool(s):

- Socket head wrench, 2.5 mm



Photo shows similar product

1. Use the six set screws (1) to set zero backlash on the guide.



INFORMATION

To check the setting, move the drill motor up and down using the spider.

At the places where the drill unit moves too fast or too slowly, screw the stud bolts in or out a little further.



9.5 Positioning the container



1. Position the container (1).
2. Place the hose (2) on the hose socket.



10 Inspection following repairs

In all cases:	Visual inspection Speed check Check coolant function Perform drilling test in metal
Mains-powered machines:	Electrical safety test
Machine with magnet:	Check magnetic holding force
Restart lock present:	Check restart lock

